
BODY PANEL UNDERCOATING AREAS

HINT:

- 1. First wipe off any dirt, grease or oil with a rag soaked in a grease, wax and silicone remover.
- 2. Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidently coated, wipe off the coating immediately.
- 3. Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.
- 4. Do not coat parts which become hot, such as the tailpipe, or moving parts, such as the propeller shaft.
- 5. Besides the locations described below, apply undercoating to all weld points under the body to insure corrosion prevention.
- 6. Be sure to seal the edge of the flange of the member and bracket with undercoating.
- 7. If undercoat is damaged by peeling, cracks, etc., be sure to repair as necessary.
- 8. Before the undercoat apply sealer allowing rust prevention to be attained.

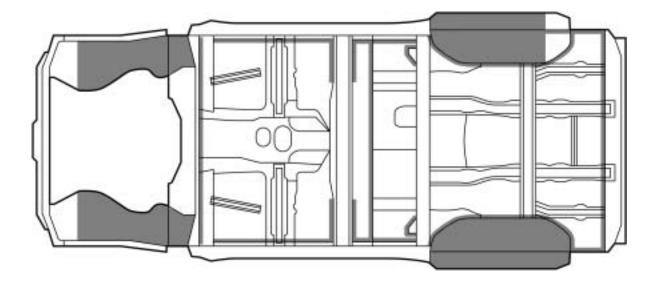

REFERENCE: Referring to the notes above, undercoating should be applied according to the specifications for your country.