

HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

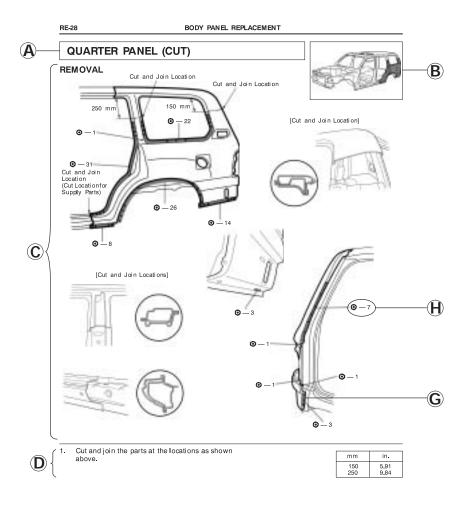

A: REPLACEMENT PARTS AND METHOD

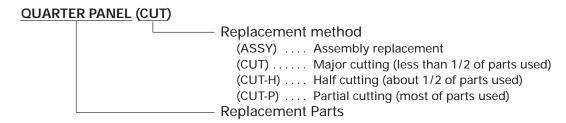


(B): PARTS LOCATION

©: REMOVAL DIAGRAM

Describes in detail removal of the damaged parts involving repair by cutting.

(D): REMOVAL GUIDE
Provides additional information to more efficiently help you perform the removal.

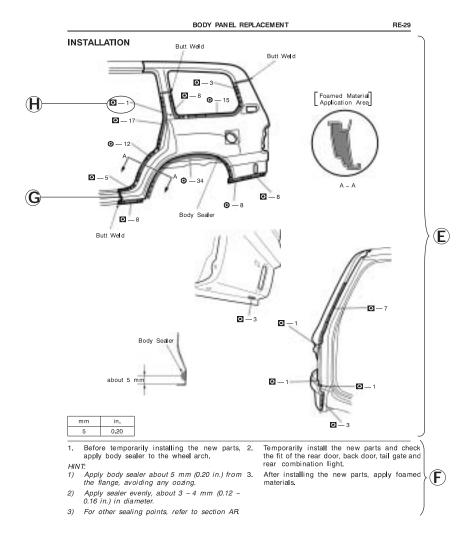

(E): INSTALLATION DIAGRAM

Describes in detail installation of the new parts involving repair by welding and/or cutting, but excluding painting.

(F): INSTALLATION GUIDE

Provides additional information to more efficiently help you perform the installation.

G: SYMBOLS

See page IN-4.

(H): ILLUSTRATION OF WELD POINTS

Weld method and panel position symbols. See page IN-5.