




## BACK DOOR OPENING REINFORCEMENT (ASSY)

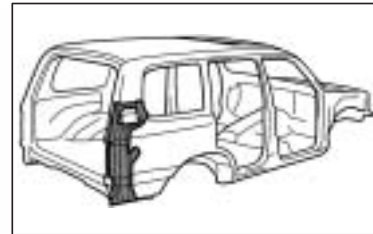


REMOVAL (With the quarter panel removed.)

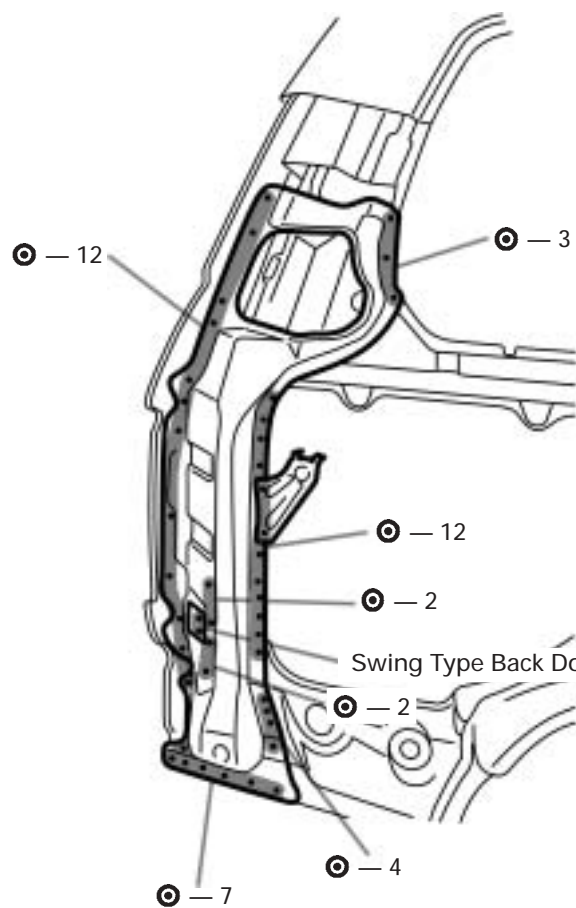


Back Door Type Spare Wheel Carrier (RH) Only: ① — 1

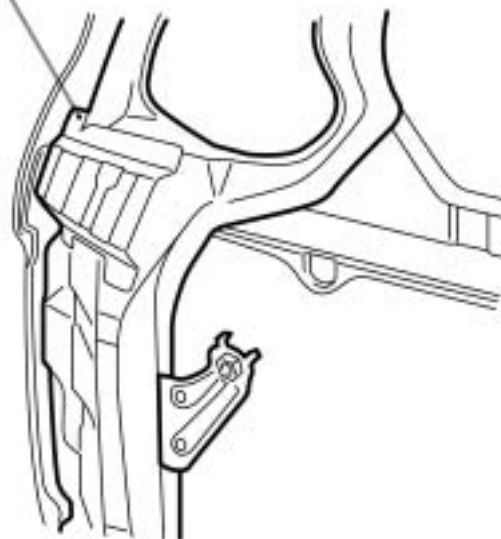

## INSTALLATION

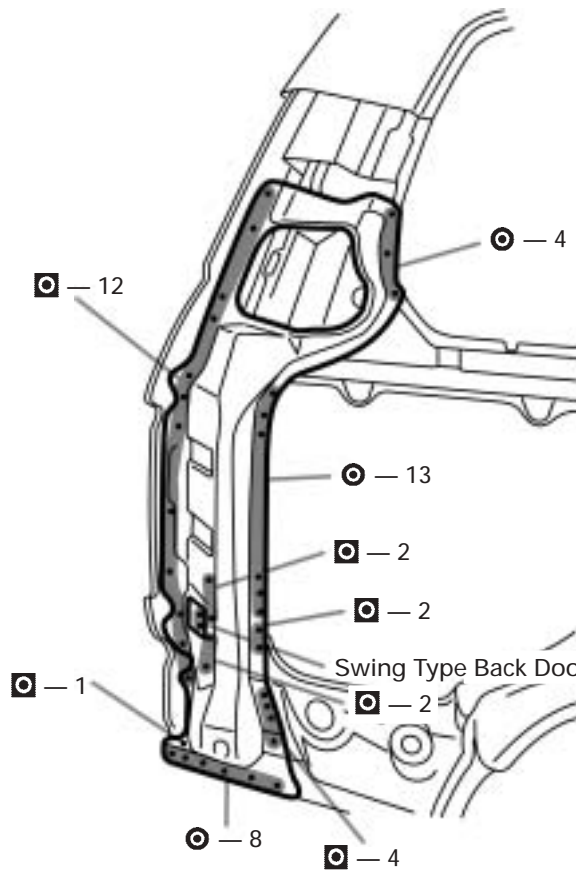

Back Door Type Spare Wheel Carrier (RH) Only: Fastener 1 (Square head) at the bottom right hinge.

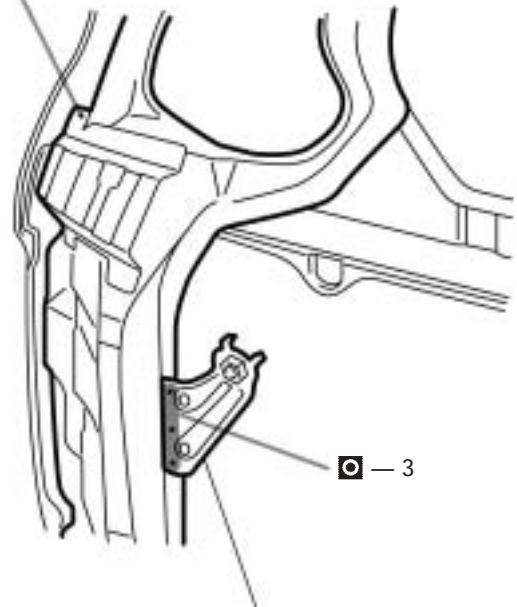

Seat Belt Anchor Reinforcement (3rd Seat Belt Only)