


ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
A/C	= Air Conditioner
AHC	= Active Height Control
A/T	= Automatic Transmission
CD	= Compact Disc
COMB.	= Combination
DIFF.	= Differential
DLC3	= Data Link Connector 3
ECT	= Electronically Controlled Transmission
ECU	= Electronic Control Unit
EDU	= Electronic Driving Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
EVAP	= Evaporative Emission
G.C.C.	= Gulf Cooperation Council
HID	= High Intensity Discharge
IC	= Integrated Circuit
ISC	= Idle Speed Control
J/B	= Junction Block
LH	= Left-Hand
LHD	= Left-Hand Drive
M/T	= Manual Transmission
O/D	= Overdrive
RH	= Right-Hand
RHD	= Right-Hand Drive
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VRV	= Vacuum Regulating Valve
VSV	= Vacuum Switching Valve
w/	= With
w/o	= Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.

HINT

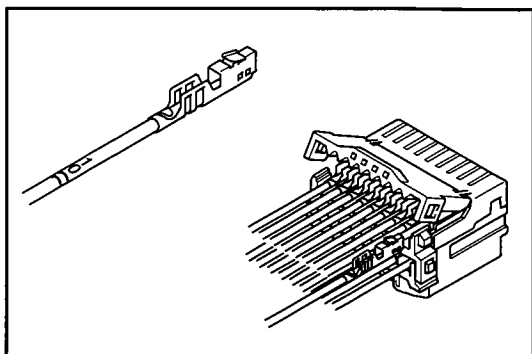

WIRE COLOR AND TERMINAL NUMBER

In some parts of the instrumental panel wiring harness, the same wire color (i.e. SB: Sky Blue) is used for all the wiring to a specific connector.

In order to identify the wiring, the terminal number is printed on the wiring.

Install the wiring to the connector position with the same terminal number.

Some early production vehicles may not have these terminal numbers printed.