


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD : 1HD-T]

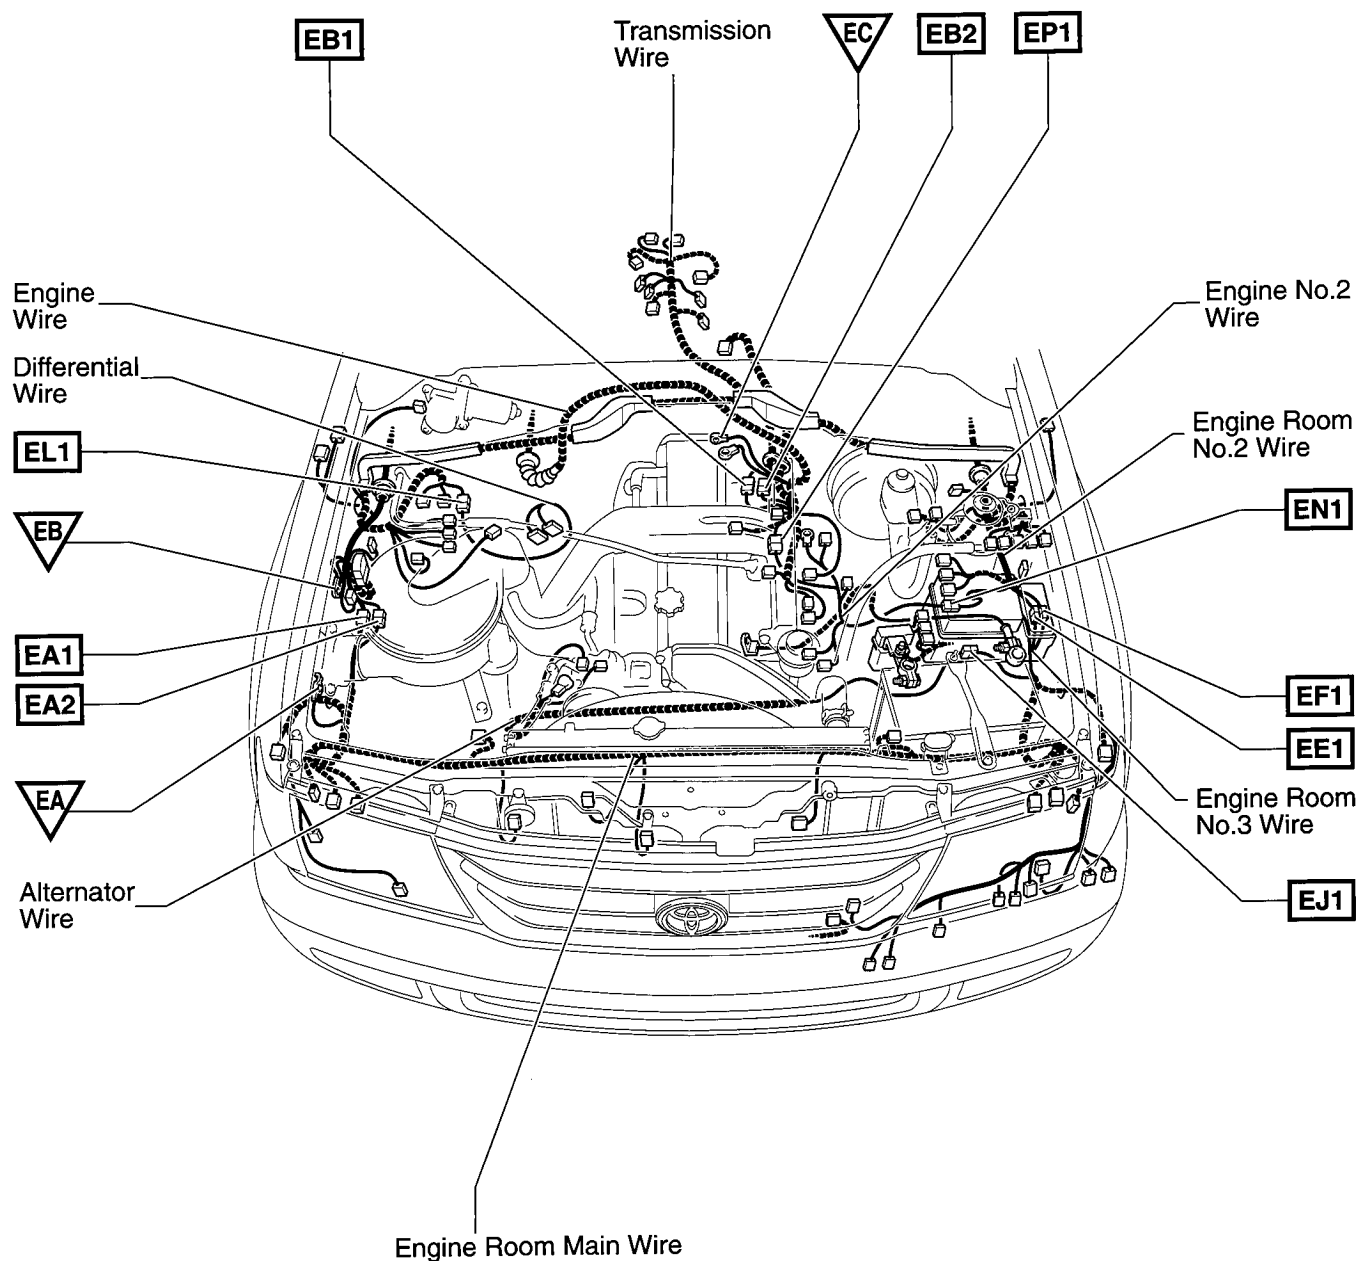

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| EA1 | Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right) |
| EA2 | Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right) |
| EB1 | Engine Wire and Transmission Wire (On the Transmission) |
| EB2 | Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B) |
| EE1 | Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B) |
| EF1 | Engine Room No.2 Wire and Engine Room Main Wire (Under the Engine Room J/B) |
| EJ1 | Engine Room Main Wire and Alternator Wire (Near the Battery) |
| EL1 | Engine Room No.2 Wire and Differential Wire (Engine Compartment Right) |
| EN1 | Engine Room No.2 Wire and Engine No.2 Wire (Near the Engine Room J/B) |
| EP1 | Engine Wire and Engine Room No.2 Wire (On the Transmission) |