
☐: Location of Connector Joining Wire Harness and Wire Harness

7: Location of Ground Points

[LHD]

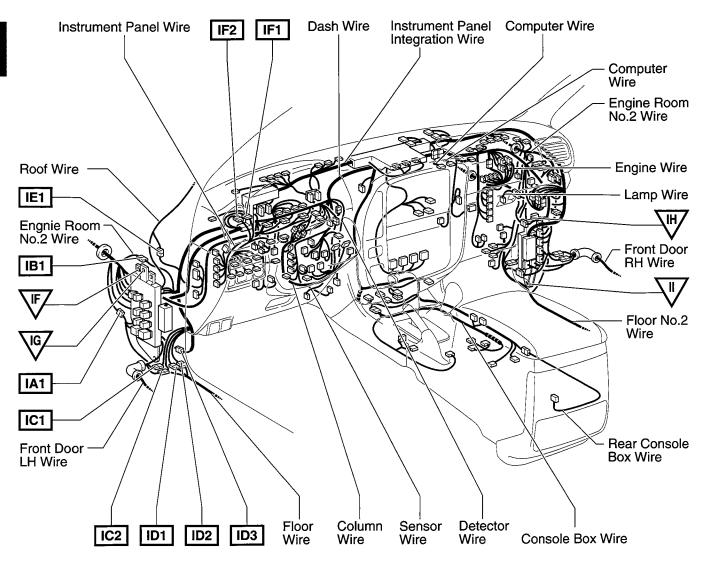

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC1	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC2	
ID1	Dash Wire and Floor Wire (Left Kick Panel)
ID2	
ID3	
IE1	Dash Wire and Roof Wire (Left Kick Panel)
IF1	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2	