
☐ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

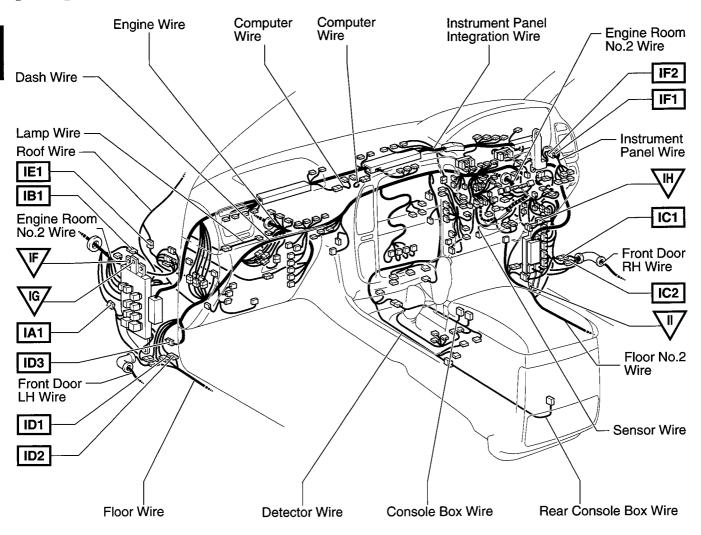

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
IB1	Engine Room No.2 Wire and Dash Wire (Left Kick Panel)
IC1	Front Door RH Wire and Dash Wire (Right Kick Panel)
IC2	
ID1	Dash Wire and Floor Wire (Left Kick Panel)
ID2	
ID3	
IE1	Dash Wire and Roof Wire (Left Kick Panel)
IF1	Instrument Panel Integration Wire and Instrument Panel Wire (Right Side of Instrument Panel)
IF2	