


E ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD : Swing Type]

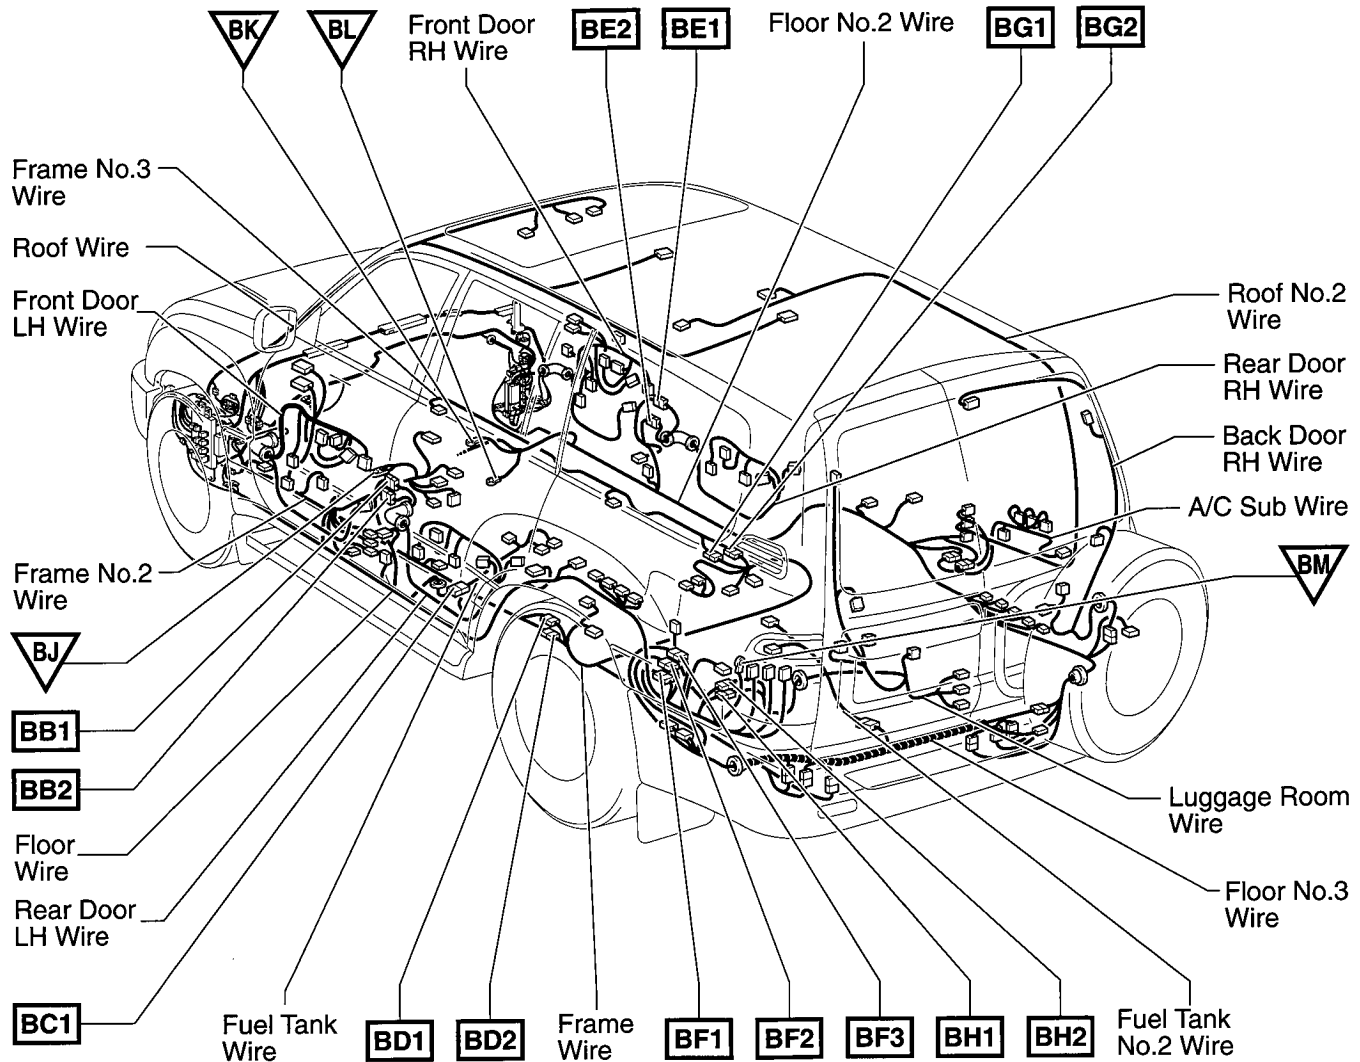

| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|------|---|
| BB1 | Rear Door LH Wire and Floor Wire (Left Side of Center Pillar) |
| BB2 | |
| BC1 | Floor Wire and Fuel Tank Wire (Near the Fuel Tank) |
| BD1 | Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support) |
| BD2 | |
| BE1 | Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar) |
| BE2 | |
| BF1 | Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel) |
| BF2 | |
| BF3 | |
| BG1 | Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support) |
| BG2 | |
| BH1 | Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel) |
| BH2 | |