


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Seat

[LHD : w/ Seat ECU]

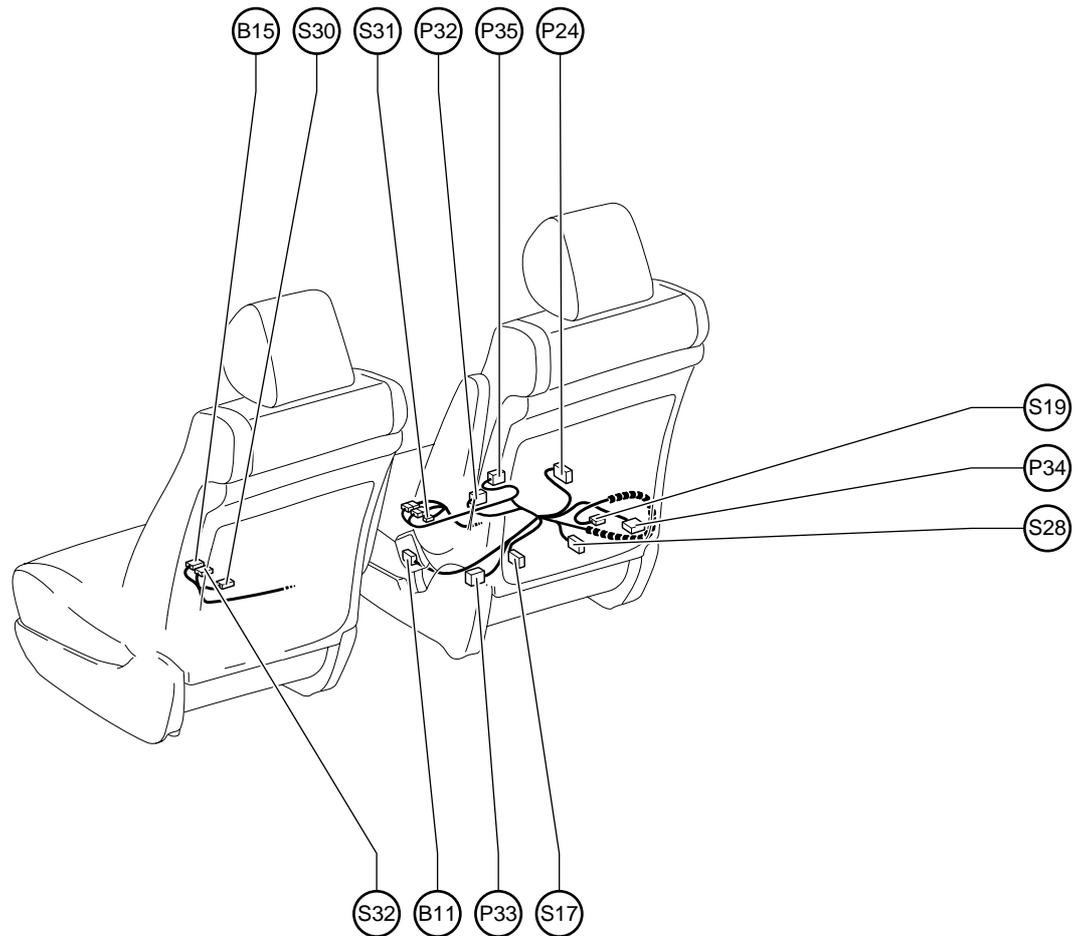

B 11 Buckle SW RH  
 B 15 Buckle SW LH  
 Seat Position Sensor

P 24 Power Seat Control SW (Front Passenger's Seat)  
 P 32 Power Seat Motor  
 (Front Passenger's Seat Front Vertical Control)  
 P 33 Power Seat Motor  
 (Front Passenger's Seat Rear Vertical Control)  
 P 34 Power Seat Motor  
 (Front Passenger's Seat Reclining Control)  
 P 35 Power Seat Motor  
 (Front Passenger's Seat Slide Control)

S 17 Seat Belt Warning Occupant Detection Sensor  
 S 19 Seat Heater (Front Passenger's Seat)  
 S 28 Seat Heater (Front Passenger's Seat Cushion)  
 S 30 Side Airbag Squib LH  
 S 31 Side Airbag Squib RH  
 S 32 Seat ECU