


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1HD-FTE]

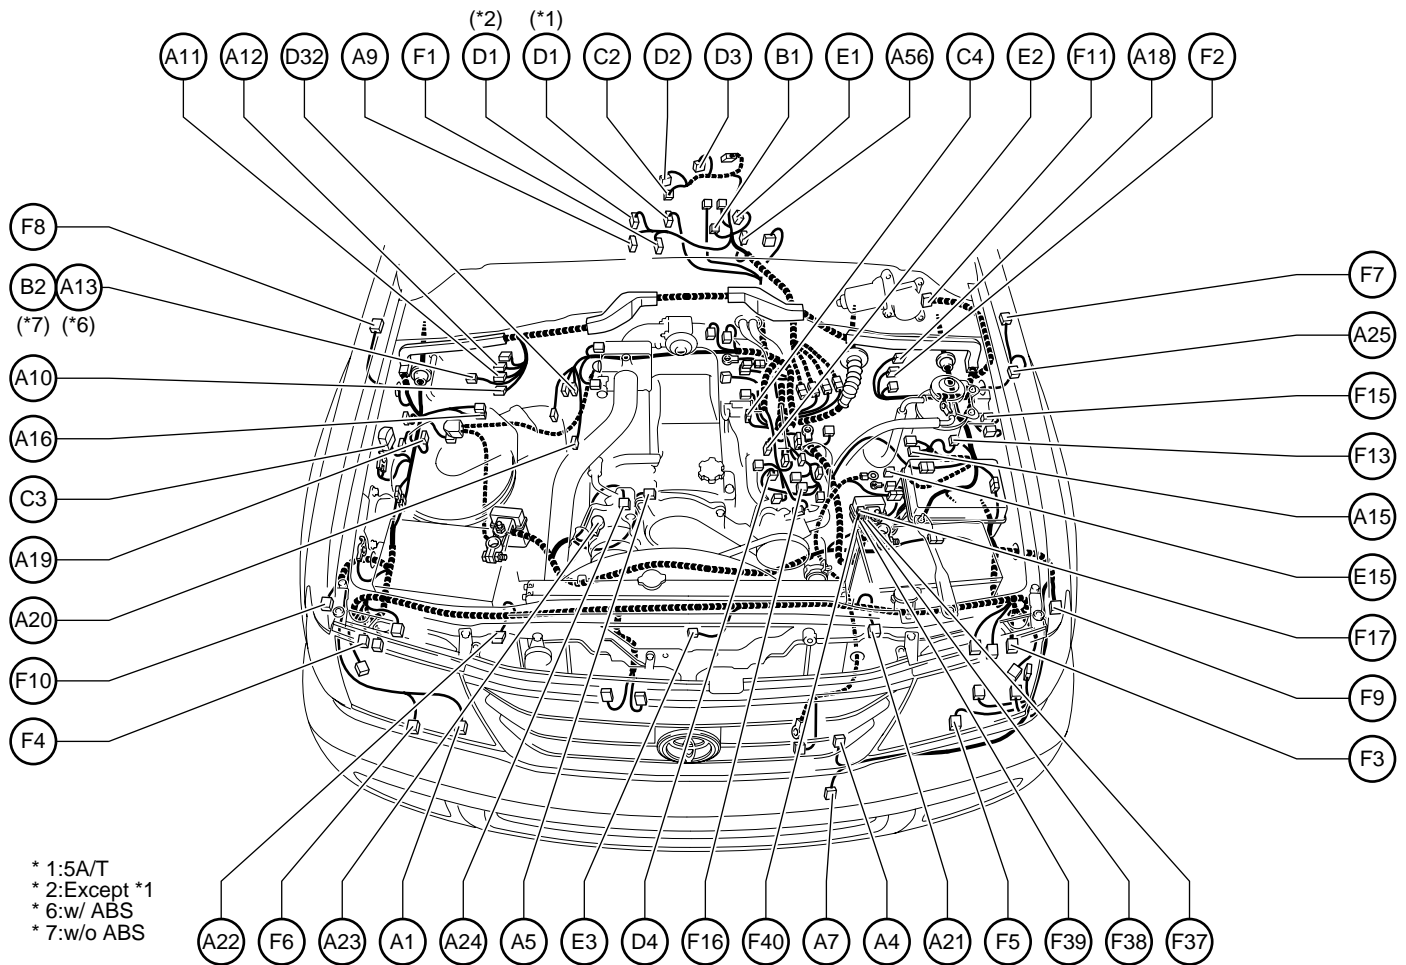

* 1:5A/T
 * 2:Except *1
 * 6:w/ ABS
 * 7:w/o ABS

- | | |
|-------------------------------------|--|
| A 1 A/C Ambient Temp. Sensor | D 1 Detection SW (Center Diff. Lock) |
| A 4 Pressure SW | D 2 Detection SW (Transfer L Position) |
| A 5 A/C Magnetic Clutch | D 3 Detection SW (Transfer Neutral Position) |
| A 7 A/C Magnetic Valve | D 4 Diesel Engine Revolution Sensor |
| A 9 A/T Oil Temp. Sensor | D32 Diesel Throttle Position SW |
| A 10 ABS Actuator | E 1 ECT Solenoid |
| A 11 ABS Actuator | E 2 EFI Water Temp. Sensor |
| A 12 ABS Actuator | E 3 Engine Hood Courtesy SW |
| A 13 ABS Actuator | E 15 EDU |
| A 15 ABS Speed Sensor Front LH | F 1 First Position SW |
| A 16 ABS Speed Sensor Front RH | F 2 Fluid Pressure Sensor |
| A 18 AHC Pump Motor | F 3 Front Clearance Light LH |
| A 19 Air Cleaner Warning Sensor | F 4 Front Clearance Light RH |
| A 20 Air Flow Meter | F 5 Front Fog Light LH |
| A 21 Airbag Sensor Front LH | F 6 Front Fog Light RH |
| A 22 Airbag Sensor Front RH | F 7 Front Side Turn Signal Light LH |
| A 23 Alternator | F 8 Front Side Turn Signal Light RH |
| A 24 Alternator | F 9 Front Turn Signal Light LH |
| A 25 Auto Antenna Motor | F 10 Front Turn Signal Light RH |
| A 56 ADD Control Motor | F 11 Front Wiper Motor |
| B 1 Back-Up Light SW | F 13 Fuel Heater SW |
| B 2 Brake Fluid Level Warning SW | F 15 Fuel Sediment SW |
| C 2 Center Diff. Lock Control Motor | F 16 Fuel Temp. Sensor |
| C 3 Check Connector | F 17 Fusible Link Block |
| C 4 Crankshaft Position Sensor | F 37 Fusible Link Block |
| | F 38 Fusible Link Block |
| | F 39 Fusible Link Block |
| | F 40 Fusible Link Block |