

**ABBREVIATIONS**

The following abbreviations are used in this manual.

4WD	=	Four Wheel Drive Vehicles
A/C	=	Air Conditioner
A/T	=	Automatic Transmission
ABS	=	Anti-Lock Brake System
ADD	=	Automatic Disconnecting Differential
AHC	=	Active Height Control
BA	=	Brake Assist
BACS	=	Boost Altitude Compensational Stopper
CD	=	Compact Disc
DIFF.	=	Differential
DLC3	=	Data Link Connector 3
EC	=	Electrochromic
ECT	=	Electronic Control Transmission
ECU	=	Electronic Control Unit
EDU	=	Electronic Driving Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
EVAP	=	Evaporative Emission
HID	=	High Intensity Discharge
INT	=	Intermittent
ISC	=	Idle Speed Control
J/B	=	Junction Block
LH	=	Left-Hand
LHD	=	Left-Hand Drive
M/T	=	Manual Transmission
O/D	=	Overdrive
R/B	=	Relay Block
RH	=	Right-Hand
RHD	=	Right-Hand Drive
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TRC	=	Traction Control
TVSS	=	TOYOTA Vehicle Security System
VGRS	=	Variable Gear Ratio Steering
VRV	=	Vacuum Regulating Valve
VSC	=	Vehicle Stability Control
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without

\* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.