


E ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[RHD : w/ Driving Position Memory]

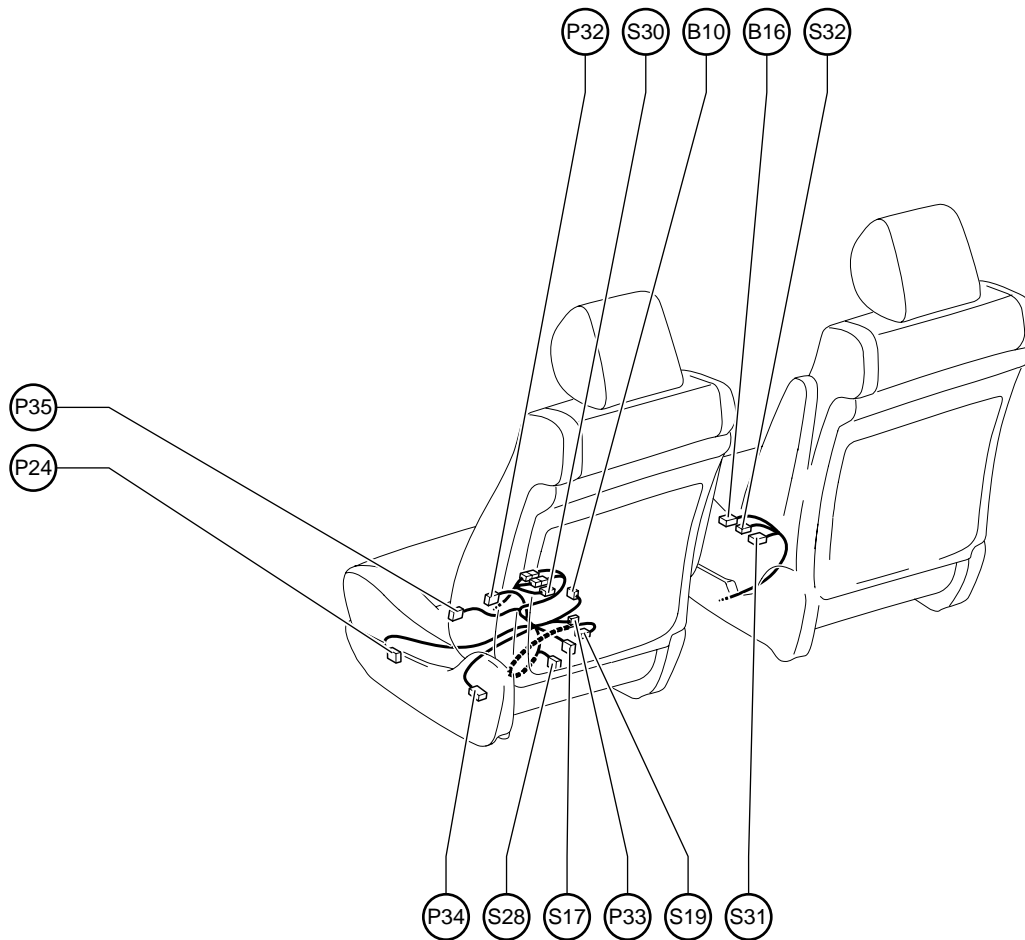

B10 Buckle SW LH
B16 Buckle SW RH
Seat Position Sensor

P24 Power Seat Control SW (Front Passenger's Seat)
P32 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P33 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P34 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P35 Power Seat Motor
(Front Passenger's Seat Slide Control)

S17 Seat Belt Warning Occupant Detection Sensor
S19 Seat Heater (Front Passenger's Seat)
S28 Seat Heater (Front Passenger's Seat Cushion)
S30 Side Airbag Squib LH
S31 Side Airbag Squib RH
S32 Seat ECU