


E ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[LHD : w/ Driving Position Memory]

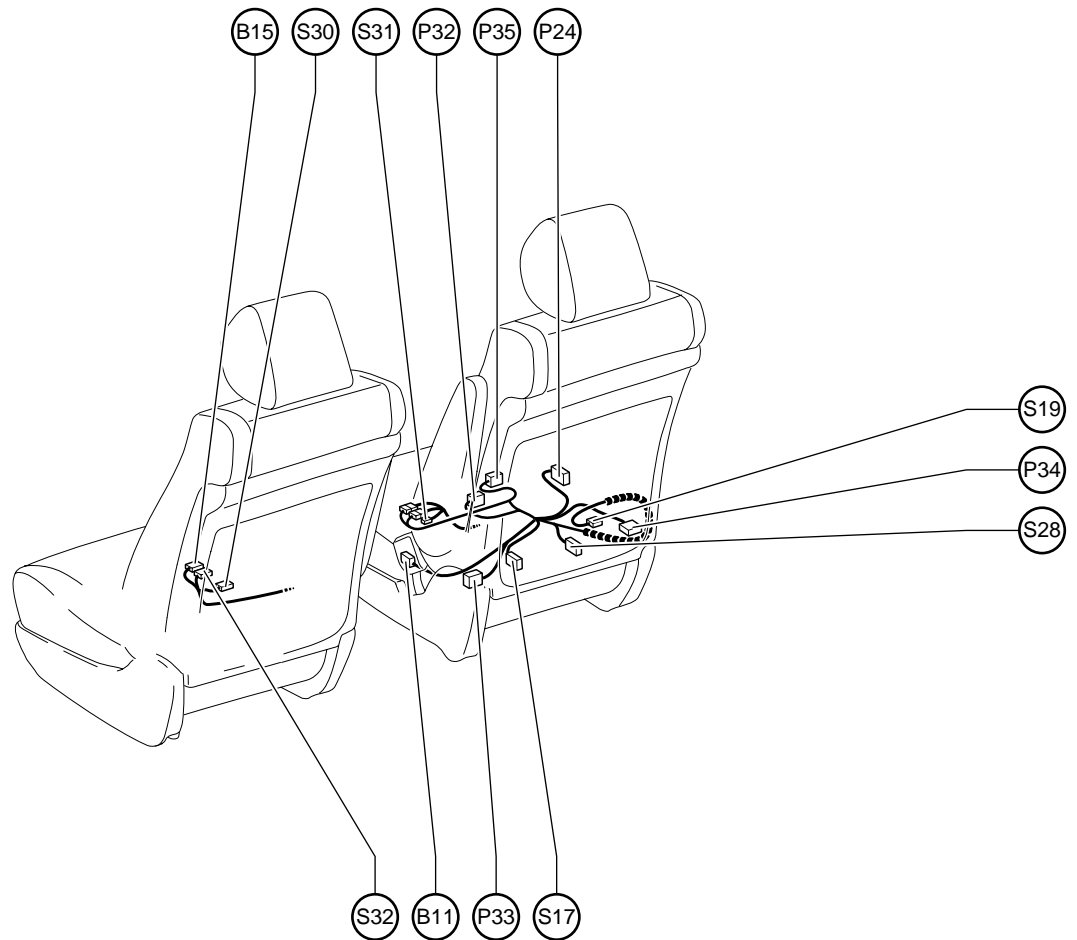

B 11 Buckle SW RH
B 15 Buckle SW LH
Seat Position Sensor

P 24 Power Seat Control SW (Front Passenger's Seat)
P 32 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P 33 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P 34 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 35 Power Seat Motor
(Front Passenger's Seat Slide Control)

S 17 Seat Belt Warning Occupant Detection Sensor
S 19 Seat Heater (Front Passenger's Seat)
S 28 Seat Heater (Front Passenger's Seat Cushion)
S 30 Side Airbag Squib LH
S 31 Side Airbag Squib RH
S 32 Seat ECU