



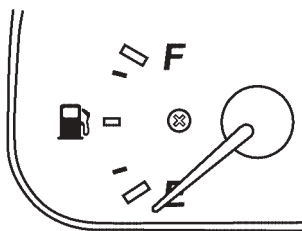

- The main fuel gauge and the sub fuel gauge have been integrated into a single gauge. The gauge can be switched to function as the main fuel gauge or the sub fuel gauge by operating the sub fuel switch.

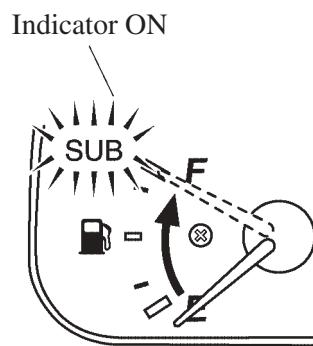

147BE16

**Main Fuel Gauge Indication**

147BE17

**Sub Fuel Gauge Indication**