

Item		Display Contents	Outline
Trip Information Display	Display Contents After Starting	DISTANCE 270 km <small>230LX62</small>	<ul style="list-style-type: none"> Displays the driven distance that is output by the meter ECU after the ignition switch has been turned ON or the RESET button has been pressed 0.8 seconds or longer. The display updates every kilometer.
	Drivable Distance	RANGE 536 km <small>230LX63</small>	<ul style="list-style-type: none"> Displays the value that has been calculated by the meter ECU, which is based on the fuel consumption data that the meter ECU continuously monitors and stores in its memory and the residual fuel volume data, provided that the ignition switch is turned ON. The display updates every kilometer.

4. Switch

Switch	Function
MODE	<ul style="list-style-type: none"> Pressing MODE switch changes the contents of the multi-information display in the following sequence: <div style="text-align: center; margin: 10px 0;"> <pre> graph TD A[Average Vehicle Speed After Starting] --> B[Driven Distance After Starting] B --> C[Drivable Distance] C --> D[Average Fuel Consumption After Refueling] D --> E[Instant Fuel Consumption] E --> A </pre> </div> If the MODE switch is pressed 1.7 seconds or longer while the ignition switch is ON, the display changes into the display unit switching mode (by blinking the display unit). By pressing the RESET switch at this time, a display unit that matches the destination of the vehicle can be selected.
RESET	Pressing the RESET switch 0.8 seconds or longer resets the display contents of each mode.