


## ■ DOOR LOCK CONTROL SYSTEM

- For improved theft deterrence performance, a double locking system has been added as standard equipment on the RHD models for Europe and optional equipment on the LHD models for Europe.
- The double lock ECU communicates with the body ECU.
- The double locking system has the following functions.:
  - 1) The double locking system also prevents the doors from being opened through the operation of the inside door knobs. Thus, the doors cannot be opened either from the inside or the outside of the vehicle.
  - 2) To lock the doors with this system, pressing the transmitter's LOCK switch, then pressing it again within 5 seconds activates the double locking system.
  - 3) However, as an emergency unlocking maneuver, the driver's and passenger's door can be unlocked with key.

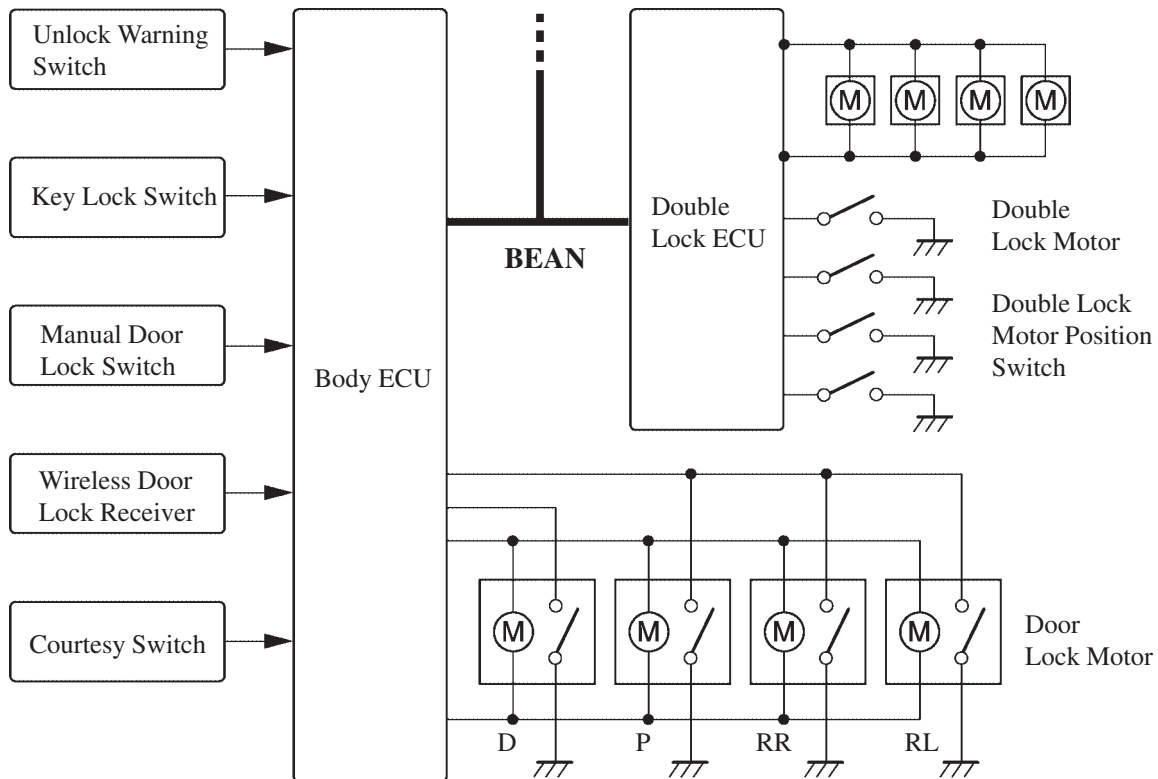

229LC156

### CAUTION

Never activate the double locking system when there are people in the vehicle because the doors cannot be opened from the inside of the vehicle.

If locking the doors by accident, press "Unlock" button of the transmitter.