

NEW FEATURES

■ ALL ENGINES

Cooling System

The TOYOTA genuine Super Long Life Coolant (SLLC) has been adopted. As result, the maintenance interval has been extended. The following chart for all engine model.

► Specifications for Europe ◀

Model					New	Previous
Engine Coolant	Capacity Liters (US qts, Imp. qts)	2UZ-FE Engine	Automatic Transmission	Without Rear Heater	14.8 (15.6, 13.0)	←
				With Rear Heater	15.3 (16.2, 13.5)	←
		1HD- FTE Engine	Manual Transmission	Without Rear and power Heater	13.2 (14.0, 11.6)	←
				Rear Heater	13.7 (14.5, 12.1)	←
				Power Heater	14.2 (15.0, 12.6)	←
			Automatic Transmission	Without Rear and power Heater	12.8 (13.5, 11.3)	←
				Rear Heater	13.3 (14.1, 12.1)	←
				Power Heater	13.8 (14.6, 12.2)	←
		Type				TOYOTA Genuine (SLLC)
	Color				Pink	Red
	Maintenance Intervals	First time			160,000 km (100,000 mile)	60,000km (37,500 mile)
Subsequent			Every 80,000 km (50,000 mile)	Every 30,000km (18,000 mile)		

- SLLC is pre-mixed (50% coolant and 50% distilled water), so no dilution is needed when adding or replacing SLLC in the vehicle.
- If LLC is mixed with SLLC, the interval for LLC (every 30,000 km / 18,000 mile or 24 months) should be used.
- You can also apply the new maintenance interval (every 80,000 km / 50,000 mile) to vehicles initially filled with LLC (red-colored), if you use SLLC (pink-colored) for the coolant change.

► Australia, G.C.C. and General countries Specifications ◀

Model						New	Previous
Engine Coolant	Capacity Liters (US pts, Imp. qts)	2UZ-FE Engine	Manual Transmission	Without Rear Heater		15.2 (16.1,13.4)	←
				With Rear Heater		15.7 (16.6, 13.8)	←
			Automatic Transmission	Without Rear Heater		14.8 (15.6, 13.0)	←
				With Rear Heater		15.3 (16.2, 13.5)	←
		1FZ-FE Engine	Manual Transmission	G.C.C countries		13.9 (14.7, 12.2)	←
				Other	Without Rear Heater	13.8 (14.7, 12.3)	←
					With Rear Heater	14.3 (15.1, 12.6)	←
			Automatic Transmission		14.0	←	
		1HD-FTE Engine	Manual Transmission	Without Rear and power Heater		13.2 (14.0, 11.6)	←
				Rear Heater		13.7 (14.5, 12.1)	←
			Automatic Transmission	Without Rear and power Heater		12.8 (13.5, 11.3)	←
				Rear Heater		13.3 (14.1, 12.1)	←
		1HZ Engine	Manual Transmission	Without Rear Heater		12.9	←
				With Rear Heater		13.4	←
			Automatic Transmission		—	←	
	Type					TOYOTA Genuine (SLLC)	TOYOTA Genuine (LLC)
	Color					Pink	Red
	Maintenance Intervals			First time		160,000 km (100,000 mile)	Every 40,000km (25,000 mile) or 24 months Whichever come first
				Subsequent		Every 80,000 km (50,000 mile)	

- SLLC is pre-mixed (50% coolant and 50% distilled water), so no dilution is needed when adding or replacing SLLC in the vehicle.
- If LLC is mixed with SLLC, the interval for LLC (every 40,000 km / 25,000 mile or 24 months) should be used.
- You can also apply the new maintenance interval (every 80,000 km / 50,000 mile) to vehicles initially filled with LLC (red-colored), if you use SLLC (pink-colored) for the coolant change.