

PRECAUTION

NOTICE:

Perform the RESET MEMORY (AT initialization) when replacing the automatic transmission assy, engine assy or the ECM (See page DI-33).

HINT:

Initialization can not be completed by only disconnecting the battery terminal.