


COUNTER CLEARANCE

HINT:

- Perform the following procedure to clear the DTC C1555/55.
 - When clearing the DTCs in DTC clear menu of the hand-held tester or SST check wire, DTC C1555/55 cannot be cleared.
 - When clearing DTCs using the SST check wire, perform the VGRS system calibration.
1. **Connect the hand-held tester to DLC3.**
 2. **Turn the ignition switch ON.**
 3. **Perform the counter clearance procedure from the VGRS menu.**

Tester menu flow:

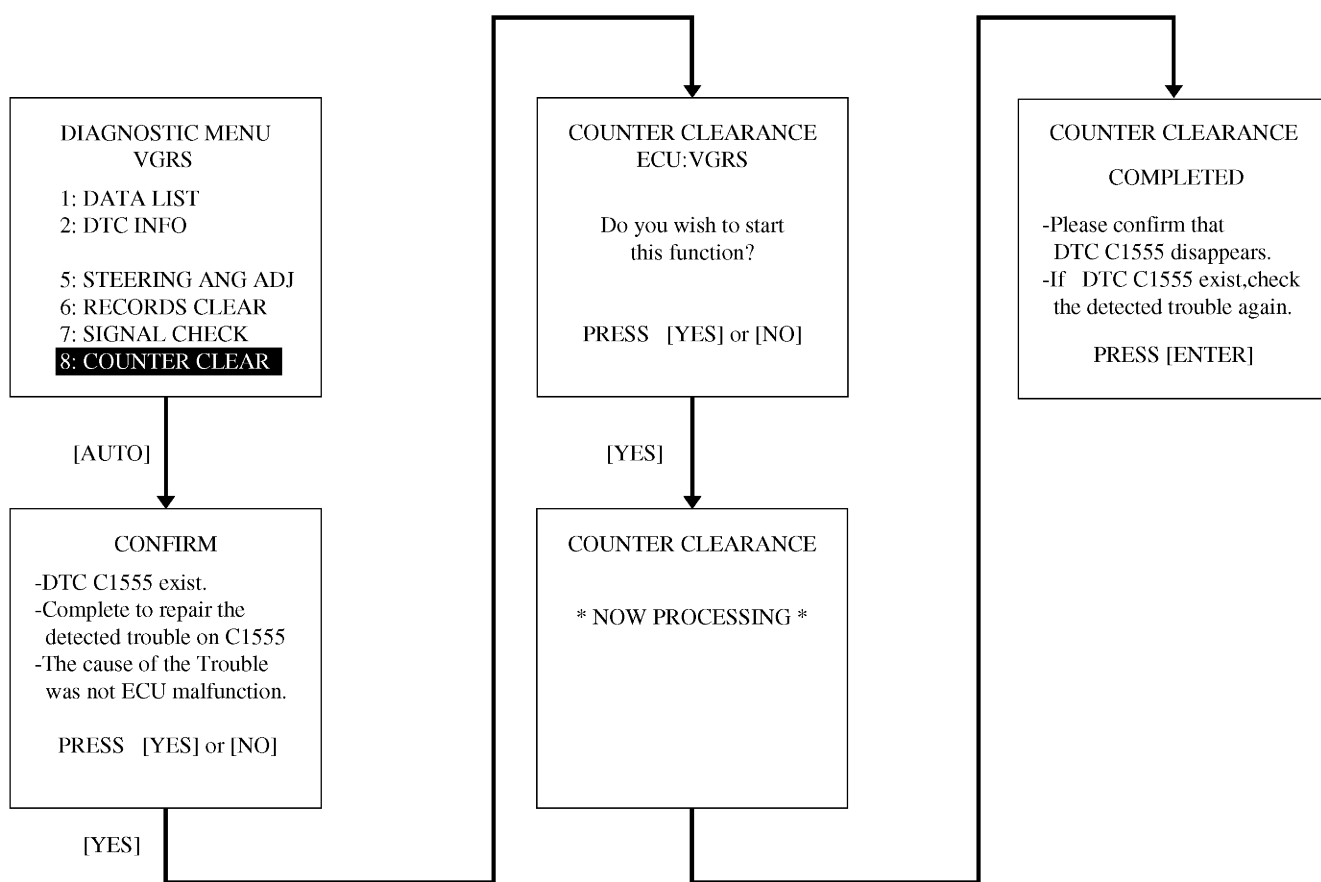

C

F17976