

<b>DTC</b>	<b>C1515 / 15</b>	<b>VGRS Actuator Neutral Position Not Initialized</b>
------------	-------------------	---

## CIRCUIT DESCRIPTION

This code is set when the VGRS ECU or actuator has been replaced.

DTC No.	DTC Detecting Condition	Trouble Area
C1515/15	When the VGRS actuator angle adjustment has not been performed.	<ul style="list-style-type: none"> <li>• VGRS actuator</li> <li>• VGRS ECU</li> </ul>

## INSPECTION PROCEDURE

<b>1</b>	<b>Are any other VGRS codes present?</b>
----------	--

**YES**

**Repair circuit indicated by DTC output.**

**NO**

<b>2</b>	<b>Perform VGRS system calibration (<a href="#">See page DI-91</a>).</b>
----------	--

**NEXT**

<b>3</b>	<b>Is DTC C1516/16 output? (VGRS actuator angle adjustment did not complete normally)</b>
----------	---

**NO**

**VGRS system calibration is completed.**

**YES**

**([See page DI-124](#))**