

## 5. No navigation displayed, "Audio OFF" on audio screen and no audio sound.

### INSPECTION PROCEDURE

**1 Service check mode**

**NG**

**Troubleshoot for each diagnosis.**

**OK**

**2 Check the radio receiver assembly.**

#### PREPARATION:

Disconnect the radio receiver assembly connector.

#### CHECK:

Check voltage at terminal +B.

#### OK:

**+B: 10 – 14 V**

#### CHECK:

Check voltage at terminal ACC when turning the ignition switch to the ACC or ON position.

#### OK:

**ACC: 10 – 14 V**

#### CHECK:

Check continuity at terminal GND.

#### OK:

**GND: Continuity**

**NG**

**Replace or repair wire harness.**

**OK**

**3 Check "AVC-LAN communication circuit". (See page DI-275)**

**NG**

**Replace the AVC –LAN circuit or radio receiver assembly.**

**OK**

**Replace the multi display.**