


# HOW TO PROCEED WITH TROUBLESHOOTING

## HINT:

Troubleshoot in accordance with the procedure on this pages.

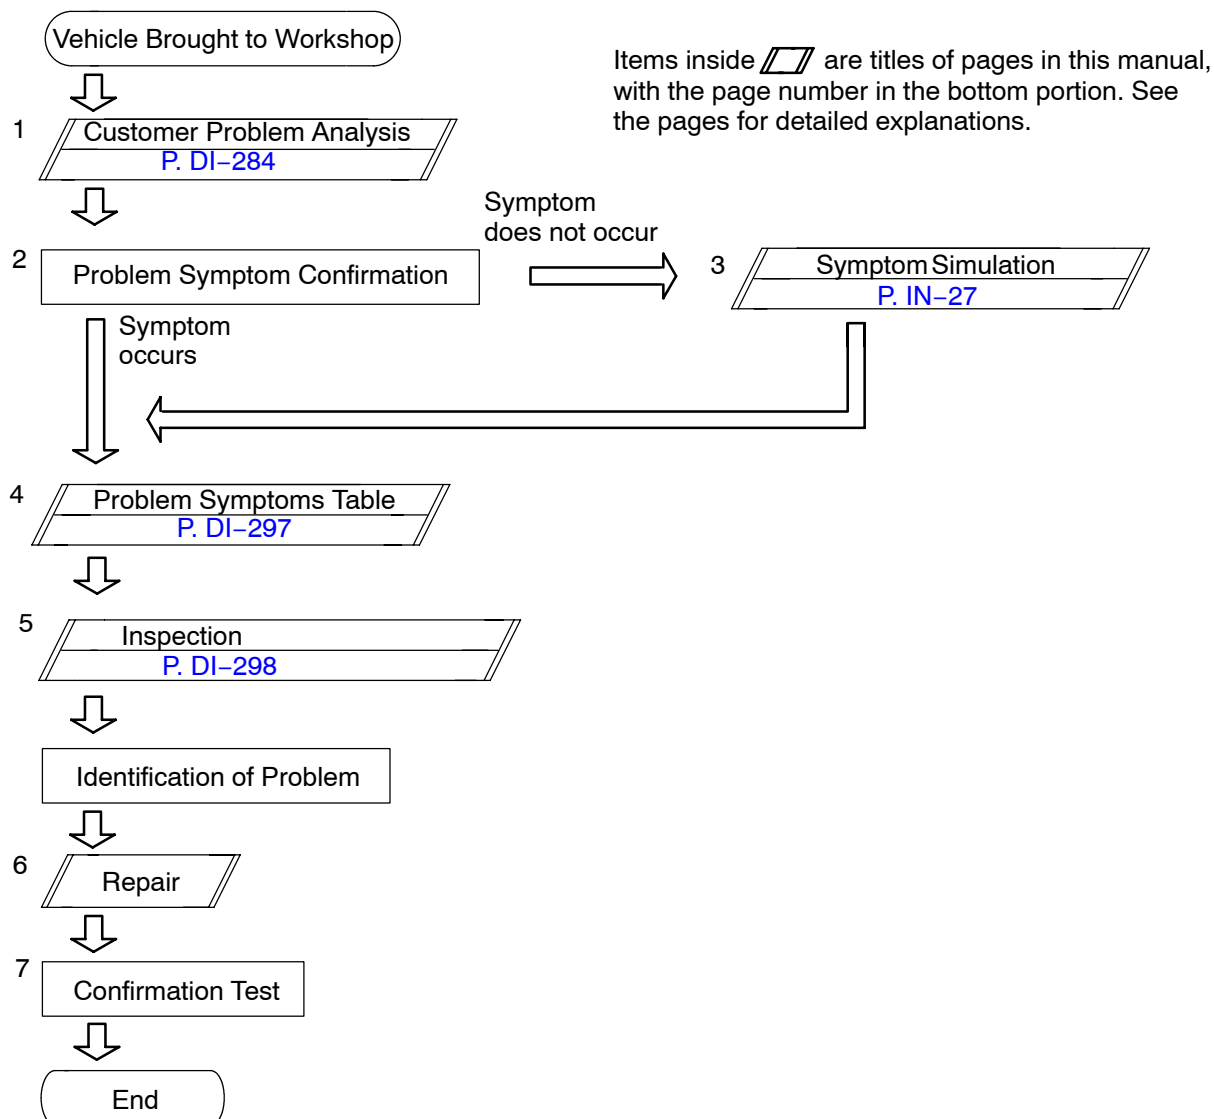

## Before troubleshooting:

- (a) Using the tester, check the battery voltage.

**Standard Voltage: 11 to 14 V**

- (b) Perform a visual check for blown fuses, and poor connections in connectors.