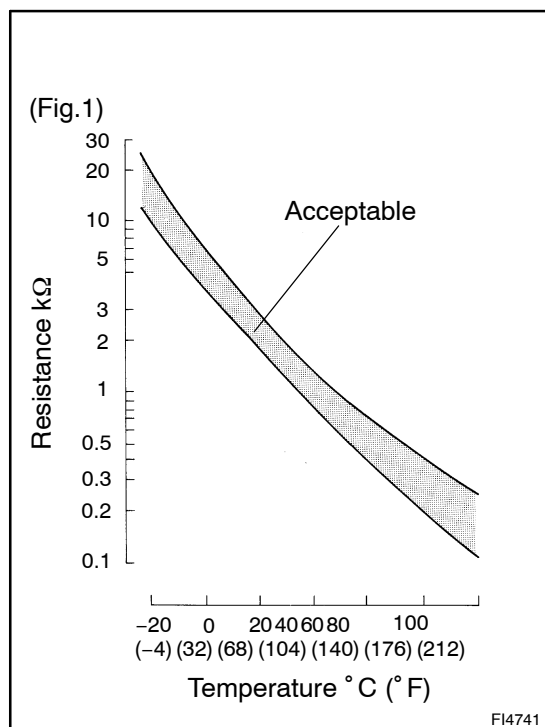


DTC**P0 180/39 Fuel Temperature Sensor Circuit****CIRCUIT DESCRIPTION**

The fuel temperature sensor senses the fuel temperature. A thermistor built into the sensor changes the resistance value according to the fuel temperature. The lower the fuel temperature, the greater the thermistor resistance value, and the higher the fuel temperature, the lower the thermistor resistance value (See Fig.1).

The fuel temperature sensor is connected to the engine ECU (see next page). The 5 V power source voltage in the engine ECU is applied to the fuel temperature sensor from the terminal THF via resistor R. That is, the resistor R and the fuel temperature sensor are connected in series. When the resistance value of the fuel temperature sensor changes, in accordance with changes in the fuel temperature, the potential at the terminal THF also changes. Based on this signal, the engine ECU increases the fuel injection volume to improve driveability during low engine revolution and high fuel temperature.


DTC No.	DTC Detection Condition	Trouble Area
P0180/39	Open or short in fuel temp. sensor circuit for 0.5 sec. or more	<ul style="list-style-type: none"> • Open or short in fuel temp. sensor circuit <ul style="list-style-type: none"> • Fuel temp. sensor • Engine ECU

HINT:

When DTC P0180/39 is detected, check the engine coolant temperature by entering the following menus on the intelligent tester II: Powertrain / Engine and ECT / Data List / Fuel Temp.

Temperature displayed	Malfunction
-40° C (-40° F)	Open circuit
140° C (284 ° F) or more	Short circuit

WIRING DIAGRAM

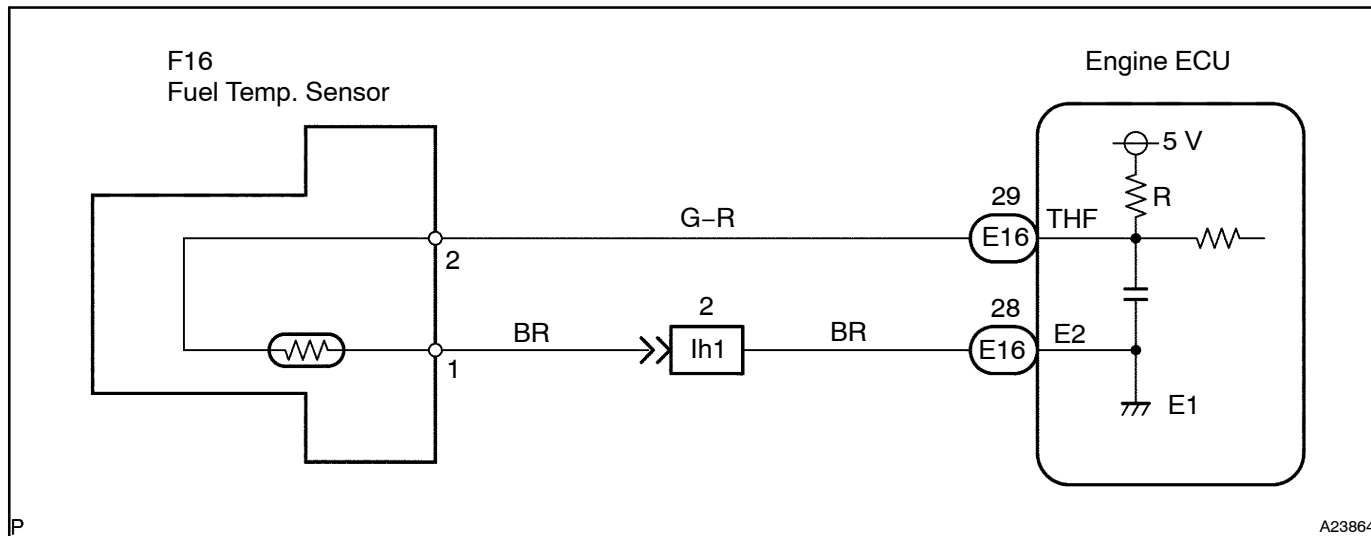

INSPECTION PROCEDURE

HINT:

- If DTCs related to different systems that have terminal E2 as the ground terminal are output simultaneously, terminal E2 may have an open circuit.
- Read freeze frame data using the intelligent tester II. Freeze frame data records the engine conditions when a malfunction is detected. When troubleshooting, freeze frame data can help determine if the vehicle was running or stopped, if the engine was warmed up or not, and other data from the time the malfunction occurred.

When using intelligent tester II:

1	Connect intelligent tester II, and read value of fuel temperature.
---	--

PREPARATION:

- Connect the intelligent tester II to the DLC3.
- Turn the ignition switch ON and push the intelligent tester II main switch ON.

CHECK:

Read the temperature value on the intelligent tester II.

OK:

Same as actual fuel temperature.

HINT:

- If there is an open circuit, the intelligent tester II indicates -40°C (-40°F).
- If there is a short circuit, the intelligent tester II indicates 140°C (284°F) or more.


NG

-40°C (-40°F)... Go to step 2.
 140°C (284°F) or more... Go to step 4.

OK

Check for intermittent problems (See page DI-4).

2 Check for open in harness or engine ECU.

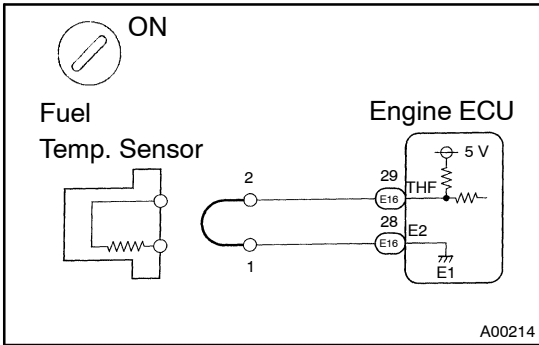

PREPARATION:

- Disconnect the fuel temp. sensor connector.
- Connect sensor wire harness terminals together.
- Turn the ignition switch ON.

CHECK:

Read the temperature value on the intelligent tester II.

OK:


Temperature value: 140° C (284 ° F) or more

OK

Confirm good connection at sensor.
If OK, replace fuel temp. sensor.

NG

3 Check for open in harness or engine ECU.

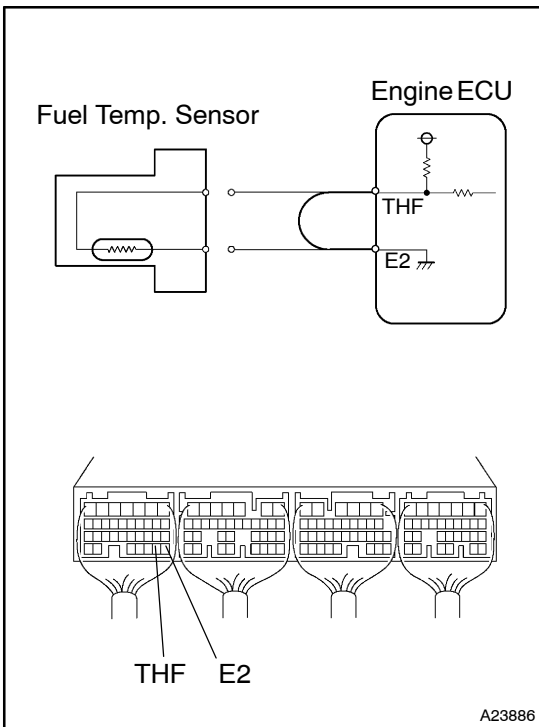

PREPARATION:

- Remove the glove compartment door.
- Connect between terminals THF and E2 of the engine ECU connector.

HINT:

Fuel temp. sensor connector is disconnected. Before checking, do a visual and contact pressure check for the engine ECU connector ([see page IN-19](#)).

- Turn the ignition switch ON.

CHECK:

Read the temperature value on the intelligent tester II.

OK:

Temperature value: 140° C (284 ° F) or more


OK

Open in harness between terminal E2 or THF, re-pair or replace harness.

NG

Confirm good connection at engine ECU. If OK, replace engine ECU.

4 Check for short in harness or engine ECU.

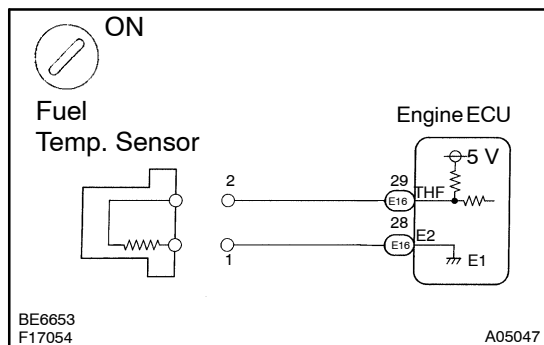

PREPARATION:

- Disconnect the fuel temp. sensor connector.
- Turn the ignition switch ON.

CHECK:

Read the temperature value on the intelligent tester II.


OK:

Temperature value: -40°C (-40°F)

OK Replace fuel temp. sensor.

NG

5 Check for short in harness or engine ECU.

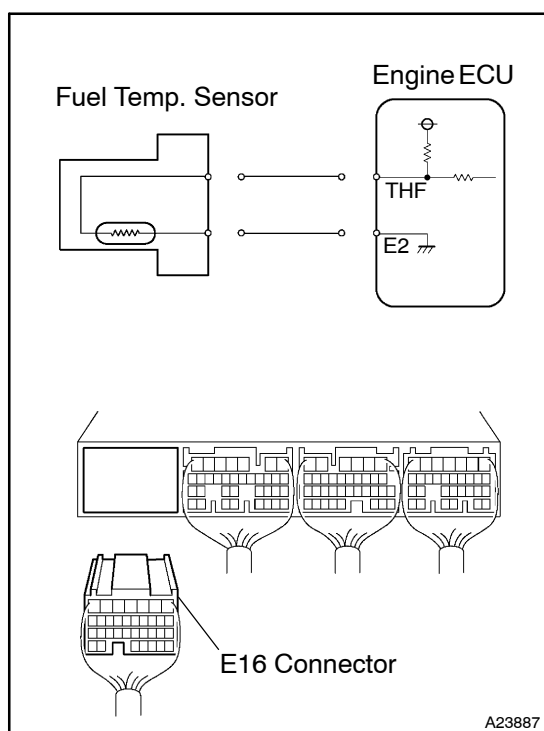

PREPARATION:

- Remove the glove compartment door.
- Disconnect the E16 connector of the engine ECU.

HINT:

Fuel temp. sensor connector is disconnected.

- Turn the ignition switch ON.

CHECK:

Read the temperature value on the intelligent tester II.

OK:

Temperature value: -40°C (-40°F)


OK Repair or replace harness or connector.

NG

Check and replace engine ECU (See page [IN-19](#)).

When not using intelligent tester II:

1 Check voltage between terminals THF and E2 of engine ECU connector.

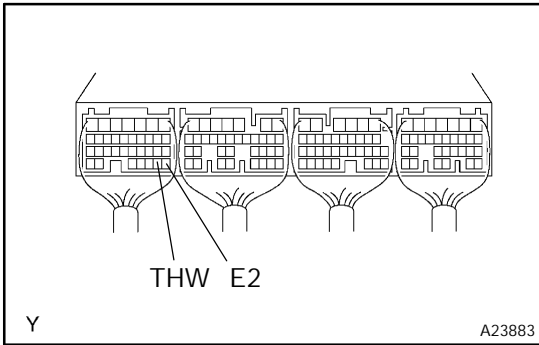

PREPARATION:

- (a) Remove the glove compartment door.
- (b) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminals THF and E2 of the engine ECU connector.

OK:

Fuel temp.	Voltage
20°C (68°F) (Engine is cool)	0.2 to 3.8 V
80°C (176°F) (Engine is hot)	0.1 to 1.5 V

OK

Check for intermittent problems
(See page DI-4).

NG

2 Check fuel temp. sensor (See Pub. No. RM617E on page ED-6).

NG

Replace fuel temp. sensor.

OK

3 Check for open and short in harness and connector between engine ECU and fuel temp. sensor (See page IN-19).

NG

Repair or replace harness or connector.

OK

Check and replace engine ECU (See page IN-19).