



# EFI MAIN RELAY

EG00R-00

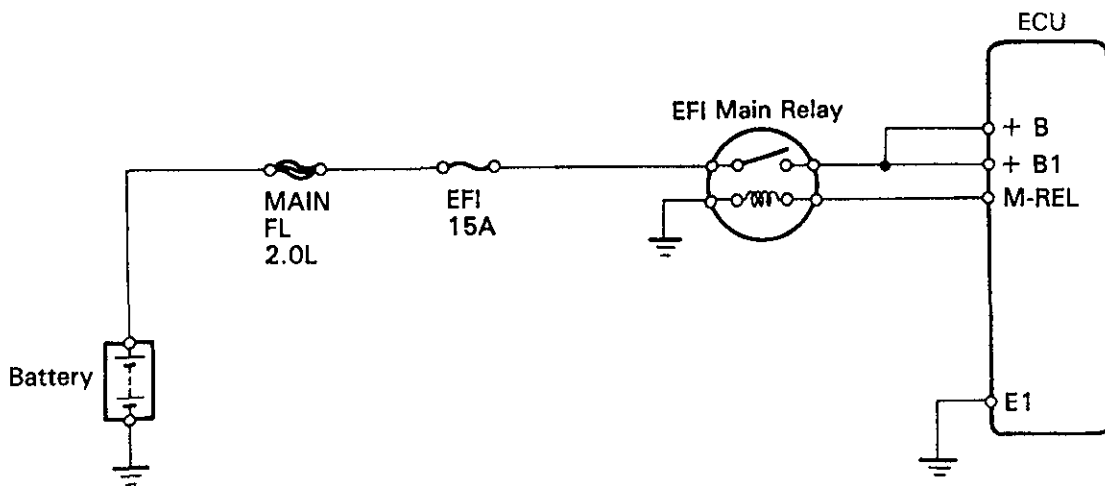

P01793

Z06697

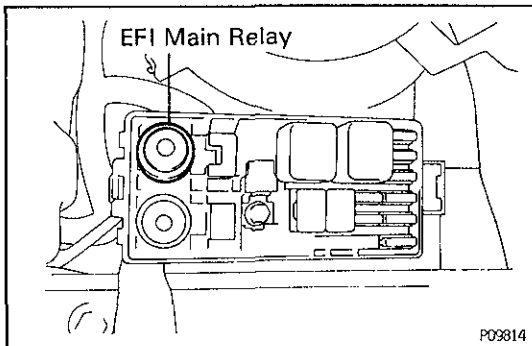


P03814

## EFI MAIN RELAY INSPECTION

EG13W-03

### 1. REMOVE EFI MAIN RELAY

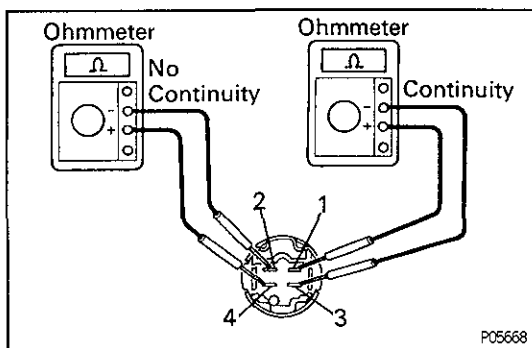


P05668

### 2. INSPECT EFI MAIN RELAY

#### A. Inspect relay continuity

- Using an ohmmeter, check that there is continuity between terminals 1 and 3.
- Check that there is no continuity between terminals 2 and 4.

If continuity is not as specified, replace the relay.

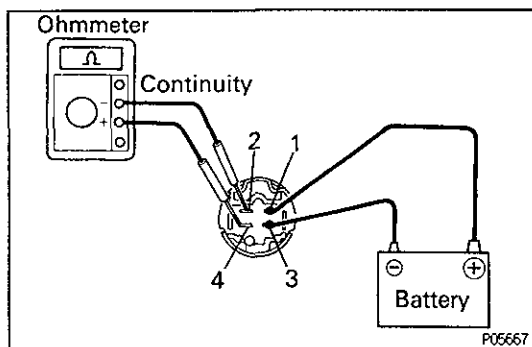

P05667

#### B. Inspect relay operation

- Apply battery voltage across terminals 1 and 3.
- Using an ohmmeter, check that there is continuity between terminals 2 and 4.

If operation is not as specified, replace the relay.

### 3. REINSTALL EFI MAIN RELAY