


FUEL PUMP RELAY AND RESISTOR


EG0E0-09

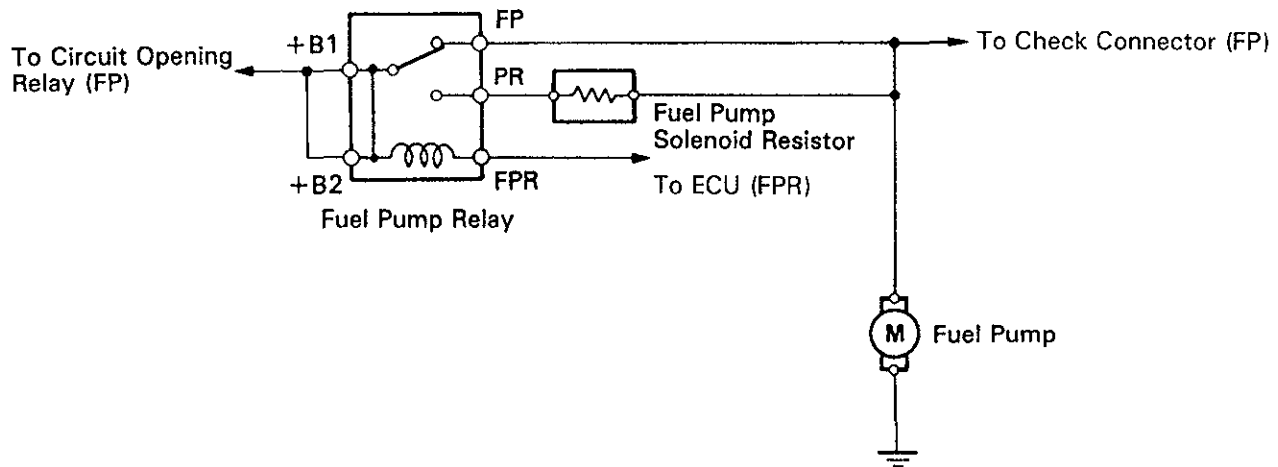

P01701

Z06702

EG

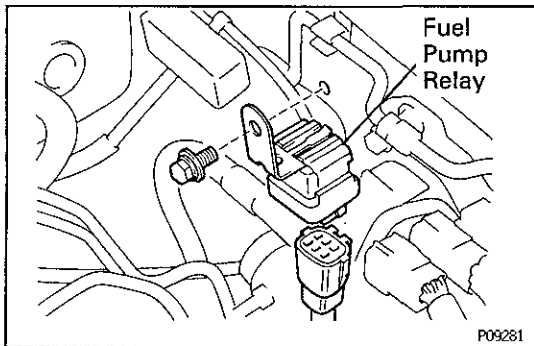


P09281

FUEL PUMP RELAY INSPECTION

EG0E1-04

1. REMOVE FUEL PUMP RELAY

- (a) Disconnect the fuel pump relay connector.
- (b) Remove the bolt and fuel pump relay.

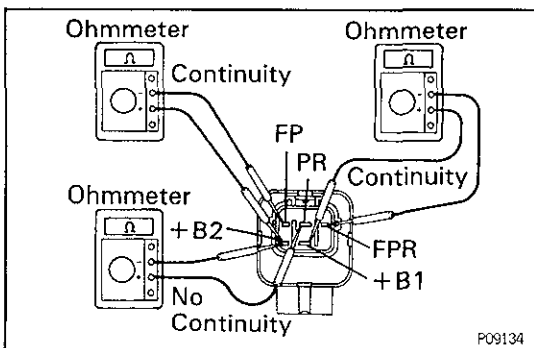


P09134

2. INSPECT FUEL PUMP RELAY

A. Inspect relay continuity

- (a) Using an ohmmeter, check that there is continuity between terminals +B1 and FPR.
- (b) Check that there is continuity between terminals +B2 and FP.
- (c) Check that there is no continuity between terminals +B2 and PR.

If continuity is not as specified, replace the relay.

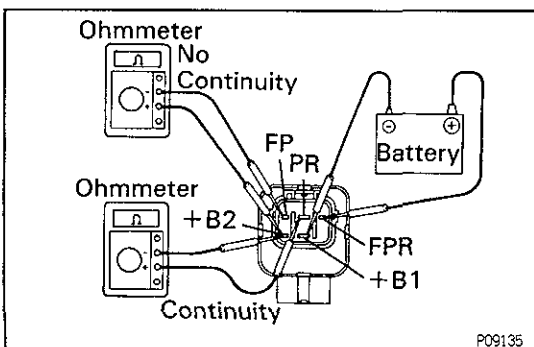


P09135

B. Inspect relay operation

- (a) Apply battery voltage across terminals +B1 and FPR.
- (b) Using an ohmmeter, check that there is no continuity between the +B2 and FP.
- (c) Check that there is continuity between terminals +B2 and PR.

If operation is not as specified, replace the relay.

3. REINSTALL FUEL PUMP RELAY

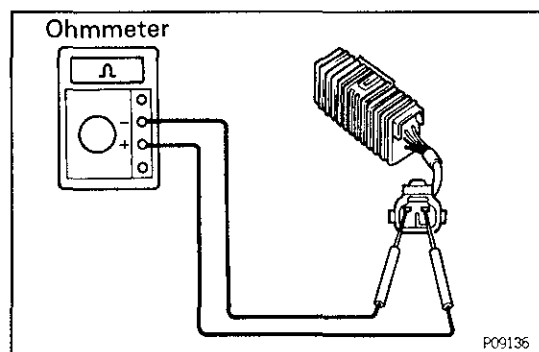

EG

FUEL PUMP RESISTOR INSPECTION

1. **DISCONNECT FUEL PUMP RESISTOR CONNECTOR**
2. **INSPECT FUEL PUMP RESISTOR**

Using an ohmmeter, measure the resistance between the terminals.

Resistance (Cold):

Approx. 0.73 Ω

If there is no continuity, replace the resistor.

3. **RECONNECT FUEL PUMP RESISTOR CONNECTOR**