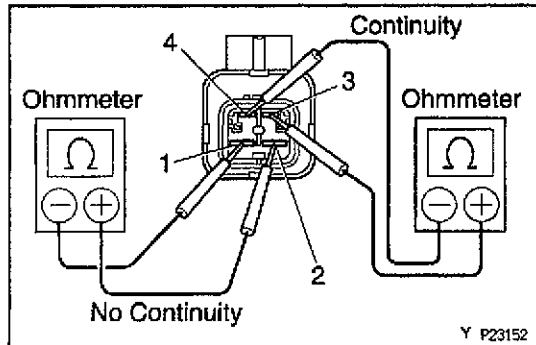


**EFI MAIN RELAY****(Hardtop)****EFI MAIN RELAY INSPECTION**

EG15W-0L


**1. REMOVE EFI MAIN RELAY**

**LOCATION:** In the engine compartment on the left side.

**2. INSPECT EFI MAIN RELAY****A. Inspect relay continuity**

- (a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
- (b) Check that there is no continuity between terminals 1 and 2.

If continuity is not as specified, replace the relay.

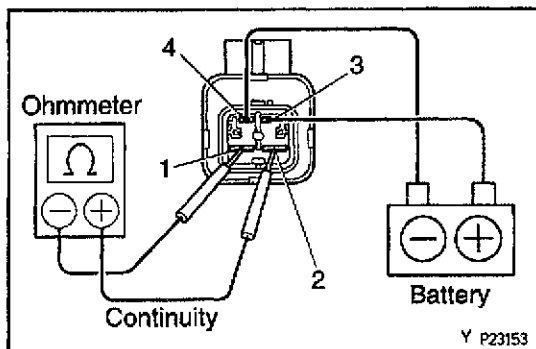**B. Inspect relay operation**

- (a) Apply battery voltage across terminals 3 and 4.
- (b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

**3. REINSTALL EFI MAIN RELAY**