
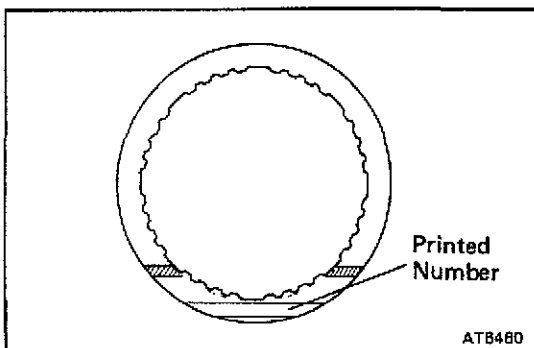


# FIRST AND REVERSE BRAKE COMPONENTS

AT068-07

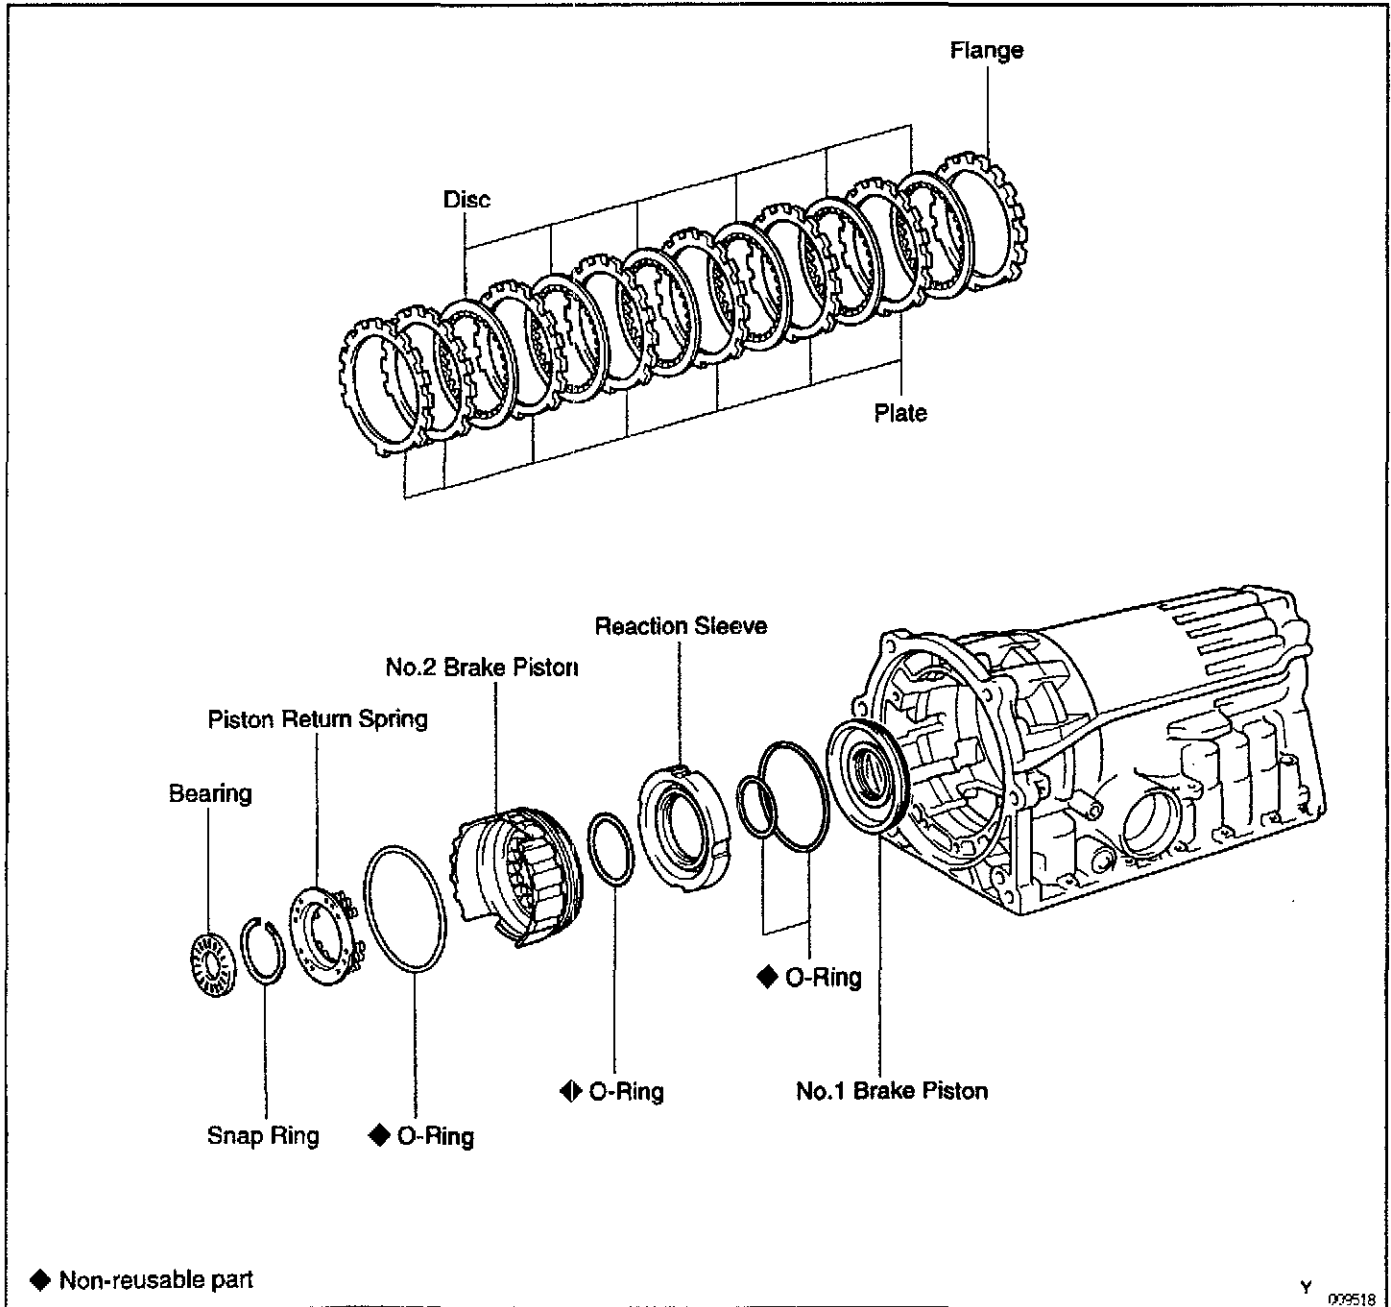

## 1ST AND REVERSE BRAKE INSPECTION

AT064-06

### INSPECT DISC, PLATE AND FLANGE

Check to see if the sliding surface of the disc, plate and flange are worn or burnt. If necessary, replace them.

HINT: If the lining of the disc is peeling off or discolored, or even if a part of the printed numbers are defaced, replace all discs.