


## BLOWER RESISTOR (for Rear Cooler)

### INSPECTION

AC1TK-01

#### 1. REMOVE THESE PARTS:


- (a) Rear door scuff plate RH
- (b) Rear floor mat support plate
- (c) Quarter trim panel RH

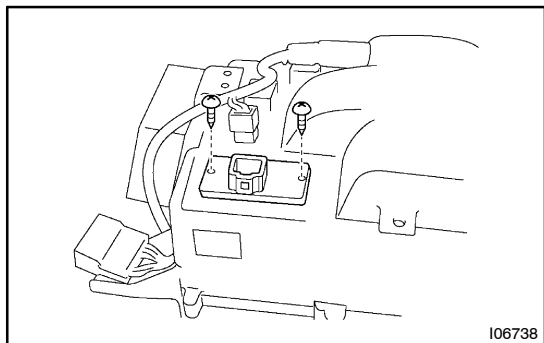

I06738

#### 2. REMOVE BLOWER RESISTOR

- (a) Disconnect the connector.
- (b) Remove the 2 screws and blower resistor.

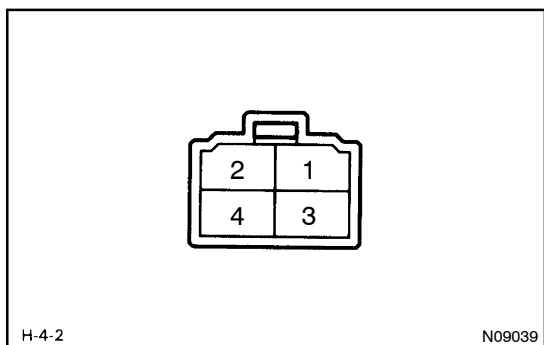

H-4-2

N09039

#### 3. INSPECT BLOWER RESISTOR RESISTANCE

Measure resistance between terminals.

Tester connection	Condition	Specified Condition
1 – 3	Constant	Approx. 2.5 k $\Omega$
2 – 3	Constant	Approx. 1.3 k $\Omega$
2 – 4	Constant	Approx. 0.5 k $\Omega$

If resistance is not as specified, replace the blower resistor.

#### 4. INSTALL POWER TRANSISTOR

- (a) Install the blower resistor with 2 screws.
- (b) Connect the connector.

#### 5. INSTALL THESE PARTS:

- (a) Quarter trim panel RH
- (b) Rear floor mat support plate
- (c) Rear door scuff plate RH