

## BLOWER RESISTOR (for Rear Heater)

### INSPECTION


AC1TJ-01

#### 1. REMOVE THESE PARTS:


- (a) Front seats
- (b) Rear console box
- (c) Front console box cover
- (d) Lower center cluster finish panel
- (e) Front door scuff plates
- (f) Cowl side trims
- (g) Rear door scuff plates
- (h) Center pillar garnishes

#### 2. REMOVE BLOWER RESISTOR

- (a) Slide the floor carpet backward.

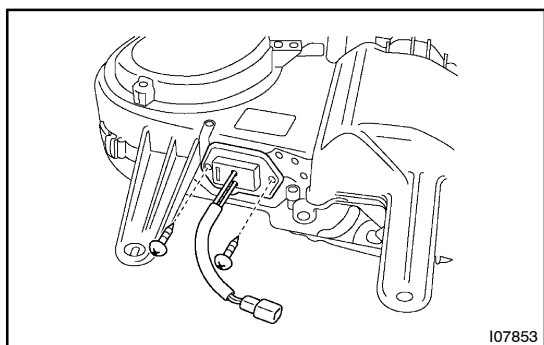

- (b) Disconnect the connector.
- (c) Remove the 2 screws and blower resistor.

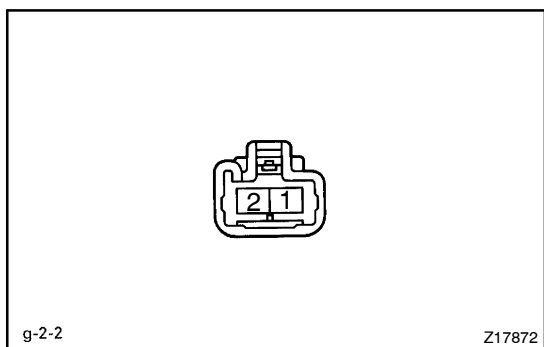

#### 3. INSPECT BLOWER RESISTOR RESISTANCE

Measure resistance between terminals.

**Standard resistance:  $3.2 \pm 0.2 \Omega$**

If resistance is not as specified, replace the blower resistor.

#### 4. INSTALL BLOWER RESISTOR

#### 5. INSTALL THESE PARTS:

- (a) Center pillar garnishes
- (b) Rear door scuff plates
- (c) Cowl side trims
- (d) Front door scuff plates
- (e) Rear console box
- (f) Front seats