


# AIR OUTLET SERVOMOTOR INSPECTION

AC1TP-01


1. REMOVE LOWER NO. 1 PANEL  
(See page BO-127)

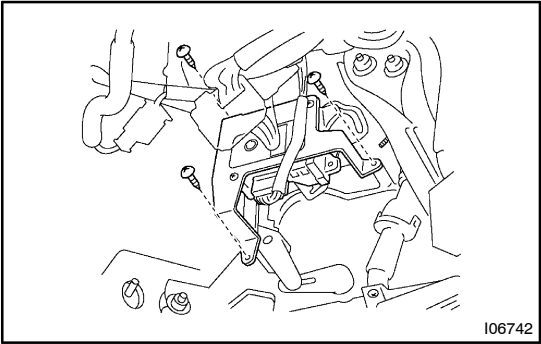

I06742

2. REMOVE AIR OUTLET SERVOMOTOR

- (a) Disconnect the connector.  
(b) Remove the 3 screws and servomotor.

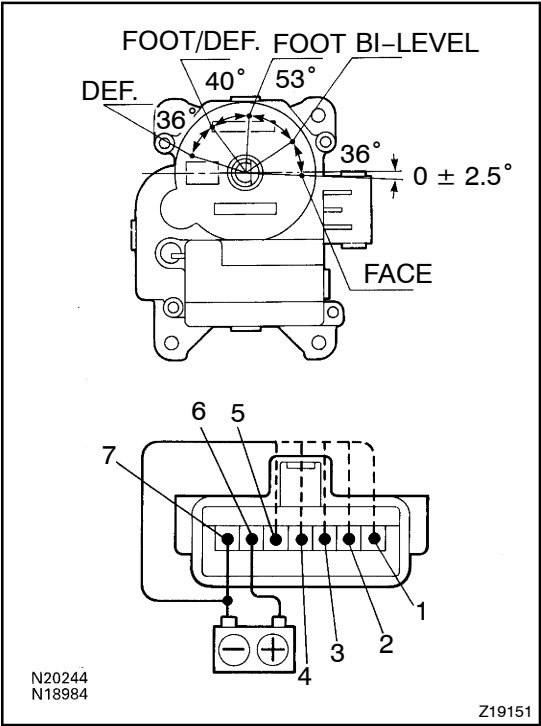

N20244  
N18984

Z19151


3. LHD Models:

INSPECT AIR OUTLET SERVOMOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7.  
(b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
5	DEF.
4	FOOT/DEF.
3	FOOT
2	B/L
1	FACE

If operation is not as specified, replace the servomotor.

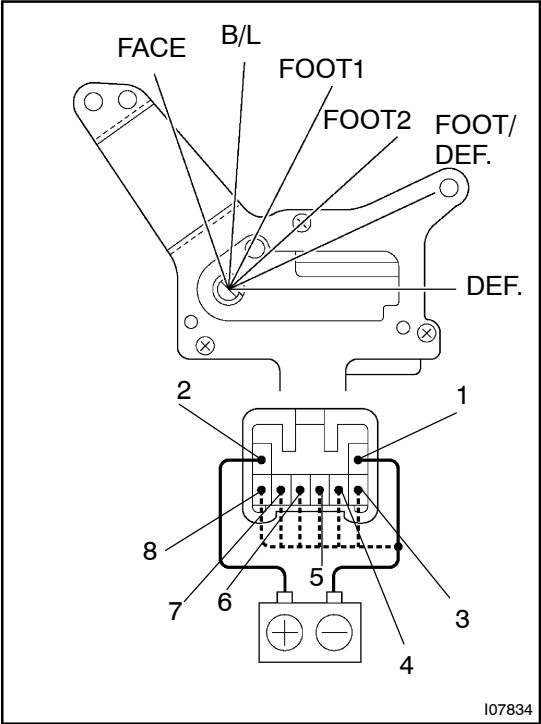

- 4. RHD Models:**  
**INSPECT AIR OUTLET SERVOMOTOR OPERATION**
- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1.
  - (b) Connect the negative (-) lead from the battery to each terminal and check that the shaft rotates at each position, as shown in the chart.

Connected terminal	Position
3	DEF.
4	FOOT/DEF.
5	FOOT 1
6	FOOT 2
7	B/L
8	FACE

If operation is not as specified, replace the servomotor.

- 5. INSTALL AIR OUTLET SERVOMOTOR**
- (a) Install the servomotor with the 3 screws.
  - (b) Connect the connector.
- 6. INSTALL LOWER NO. 1 PANEL**