


ROOM TEMPERATURE SENSOR (for Front A/C) INSPECTION

AC1TR-01

- 1. REMOVE ROOM TEMPERATURE SENSOR**
- (a) Remove the lower No. 1 panel set screw.
 - (b) Release the lower No. 1 panel set claws.
 - (c) Disconnect the connector and aspirator hose.
 - (d) Remove the screw and sensor.

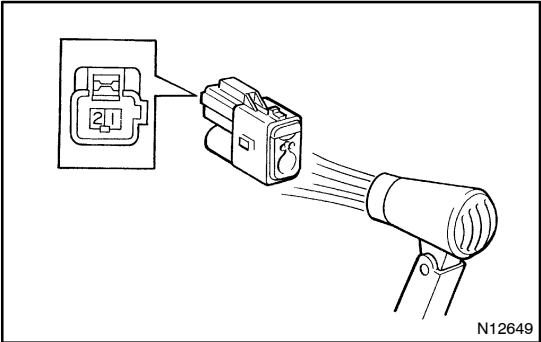

2. INSPECT ROOM TEMPERATURE SENSOR

Measure resistance between terminals at each temperature as shown in the chart.

Temperature	Specified condition
25 °C (77 °F)	1.7 ± 0.85 Ω
50 °C (122 °F)	0.6 ± 0.1 Ω

If resistance is not as specified, replace the sensor.

3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Install the sensor to the lower No. 1 panel with the screw.
- (b) Connect the aspirator hose and connector.
- (c) Install the lower No. 1 panel with the screw.