

## ROOM TEMPERATURE SENSOR (for Rear A/C) INSPECTION


AC1TS-01

### 1. REMOVE ROOM TEMPERATURE SENSOR

Using a screwdriver, pull out the sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

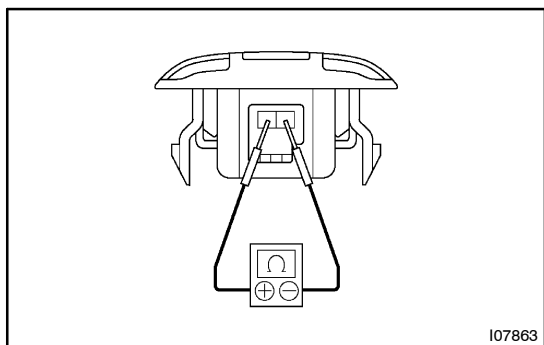

### 2. INSPECT ROOM TEMPERATURE SENSOR

Measure resistance between terminals

**Standard resistance:  $1.7 \pm 0.85 \text{ k } \Omega$  at  $25 \text{ }^{\circ}\text{C}$  ( $77 \text{ }^{\circ}\text{F}$ )**

If resistance is not as specified, replace the sensor.

### 3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Connect the connector.
- (b) Insert the sensor to the roof headlining.