


# CONDENSER FAN RELAY (Dual A/C)

## INSPECTION

AC1U3-01

- 1. REMOVE CONDENSER FAN RELAY**
- (a) Remove the front bumper cover  
(See page BO-4)
  - (b) Disconnect the connector.
  - (c) Release the claw and remove the relay.

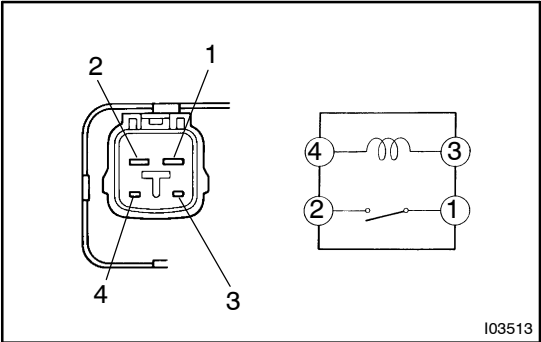

**2. INSPECT CONDENSER FAN RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	3 – 4	Continuity
Apply B+ between terminals 3 and 4.	1 – 2	Continuity

If continuity is not as specified, replace the relay.

**3. INSTALL CONDENSER FAN RELAY**