

# BLOWER SPEED CONTROL RELAY (Rear Cooler for Manual A/C)

AC1U7-01

## INSPECTION

1.

REMOVE THESE PARTS:

(a)

Rear door scuff plate

(b)

Rear floor mat support plate

(c)

Quarter trim panel RH
2.



REMOVE BLOWER SPEED CONTROL RELAY

(a)

Disconnect the connector.

(b)

Remove the screw and relay.

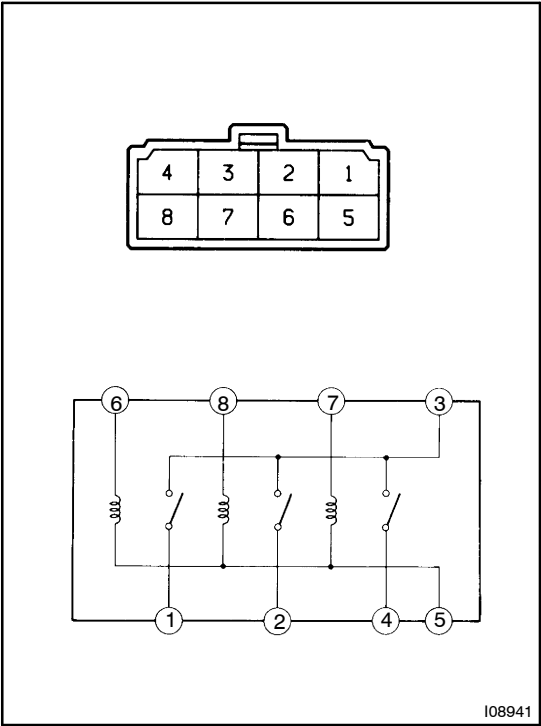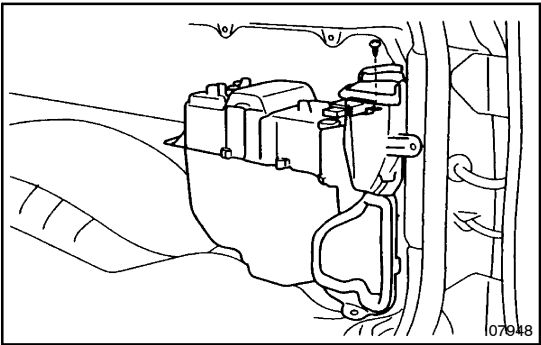

## 3. INSPECT BLOWER SPEED CONTROL RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	5 – 6	Continuity
	5 – 7	
	5 – 8	
Apply B+ between terminals 5 and 6.	1 – 3	Continuity
Apply B+ between terminals 5 and 7.	3 – 4	Continuity
Apply B+ between terminals 5 and 8.	2 – 3	Continuity

If continuity is not as specified, replace the relay.

4.

INSTALL BLOWER SPEED CONTROL RELAY
5.

INSTALL THESE PARTS:

(a)

Quarter trim panel RH

(b)

Rear floor mat support plate

(c)

Rear door scuff plate