



## REMOVAL

### REMOVE A/C CONTROL ASSEMBLY

- (a) Using a moulding remover, remove the center cluster in order "A", "B", "C", "D", as shown in the illustration.
- (b) Disconnect the connector.