


REMOVAL


1. REMOVE THESE PARTS:

- (a) Rear door scuff plate TH
- (b) Rear floor mat support plate
- (c) Quarter trim panel RH
(See [page BO-90](#))

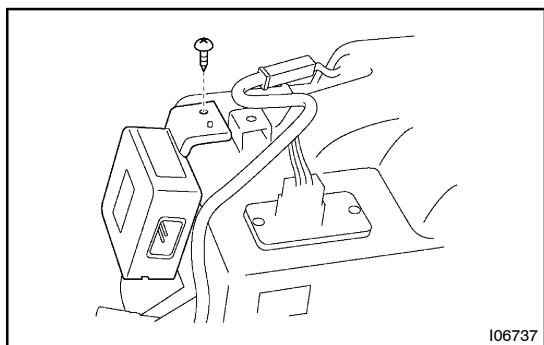

2. REMOVE A/C AMPLIFIER

- (a) Disconnect the connectors.
- (b) w/o Rear Heater:
Remove the screw and amplifier.

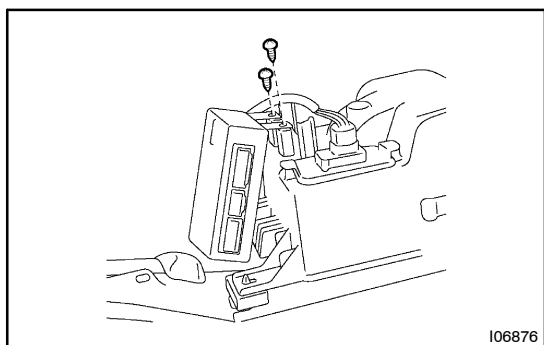

- (c) w/ Rear Heater:
Remove the 2 screws and amplifier.