


## REMOVAL

1. **REMOVE REAR CONSOLE END PANEL**  
(See [page BO-127](#))

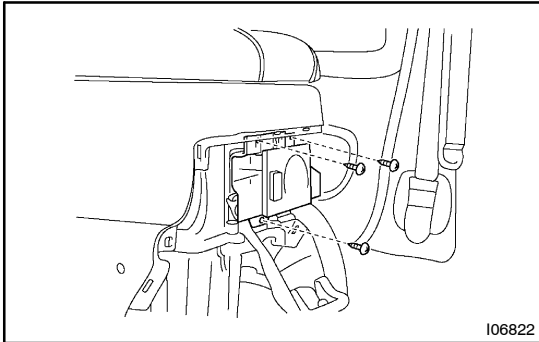

2. **REMOVE HEATER CONTROL ASSEMBLY**
  - (a) Turn the heater control dial to "MAX. WARM" position.
  - (b) Remove the 3 screws and heater control assembly then disconnect the connector and control cable.