


VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

AT08T-01

1. DISCONNECT NO.1 SPEED SENSOR CONNECTOR

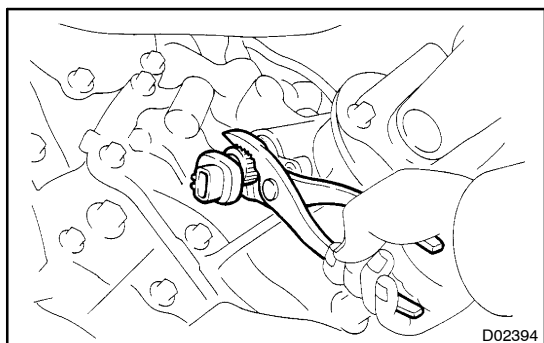

2. REMOVE NO.1 SPEED SENSOR


- (a) Loosen the serrated collar with pliers.
- (b) Remove the No.1 speed sensor.

HINT:


Do not lose the felt dust protector and washer.

3. INSTALL NO.1 SPEED SENSOR

- (a) Connect the No.1 speed sensor.
- (b) Tighten the serrated collar with pliers.

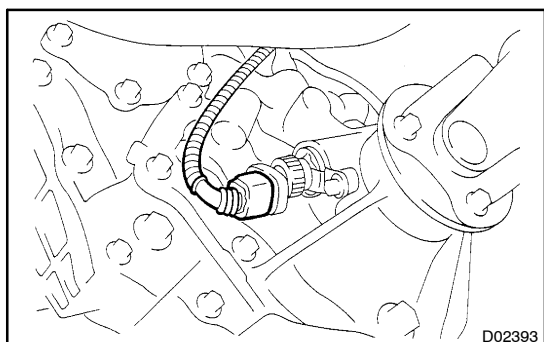


4. CONNECT NO.1 SPEED SENSOR CONNECTOR

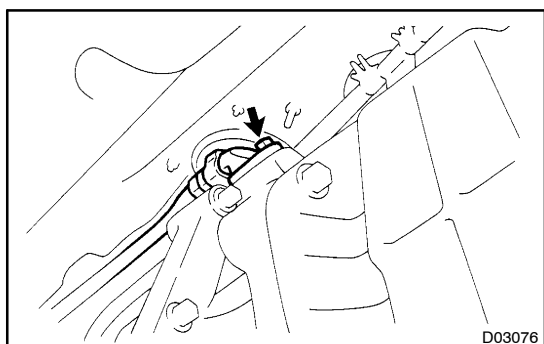

5. DISCONNECT NO.2 SPEED SENSOR CONNECTOR

6. REMOVE NO.2 SPEED SENSOR


- (a) Remove the bolt and No.2 speed sensor.

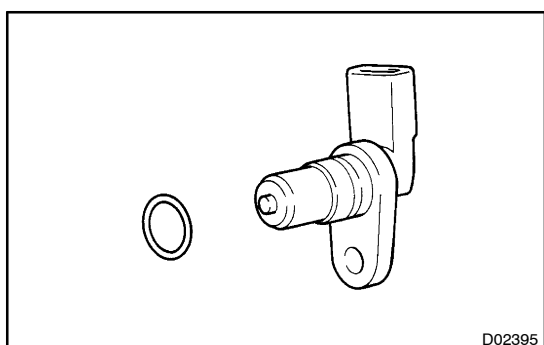

- (b) Remove the O-ring from the No.2 speed sensor.

7. INSTALL NO.2 SPEED SENSOR

- (a) Coat a new O-ring with ATF and install it to the No.2 speed sensor.

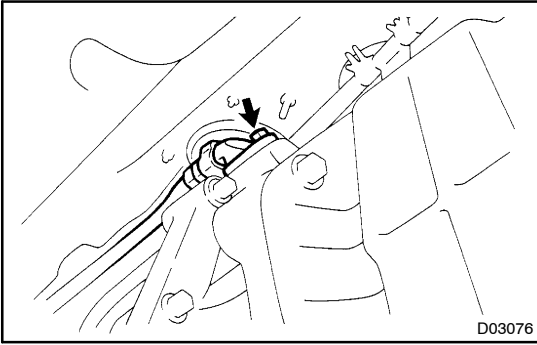

- (b) Install the No.2 speed sensor with the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- 8. CONNECT NO.2 SPEED SENSOR CONNECTOR**