



## ATF TEMPERATURE SENSOR ON-VEHICLE REPAIR

AT08V-01

1. **DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR**
2. **REMOVE ATF TEMPERATURE SENSOR**
  - (a) Remove the ATF temperature sensor.
  - (b) Remove the O-ring from the ATF temperature sensor.
3. **INSTALL ATF TEMPERATURE SENSOR**
  - (a) Coat a new O-ring with ATF and install it to the ATF temperature sensor.
  - (b) Install the ATF temperature sensor.  
**Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)**
4. **CONNECT ATF TEMPERATURE SENSOR CONNECTOR**