



ATF TEMPERATURE SWITCH (1FZ-FE, 1HD-T, 1HZ) ON-VEHICLE REPAIR

AT09H-01

1. IFS Only:
REMOVE NO.2 ENGINE UNDER COVER
2. REMOVE FRONT PROPELLER SHAFT
(See [page PR-4](#))
3. DISCONNECT ATF TEMPERATURE SWITCH CONNECTOR
4. REMOVE ATF TEMPERATURE SWITCH
 - (a) Remove the ATF temperature switch.
 - (b) Remove the O-ring from the switch.
5. INSTALL ATF TEMPERATURE SWITCH
 - (a) Coat a new O-ring with ATF and install it to the ATF temperature switch.
 - (b) Install the ATF temperature switch.
6. CONNECT ATF TEMPERATURE SWITCH CONNECTOR
7. INSTALL FRONT PROPELLER SHAFT
(See [page PR-7](#))
8. IFS Only:
INSTALL NO.2 ENGINE UNDER COVER