



LHD

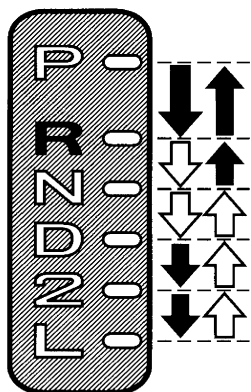

RHD

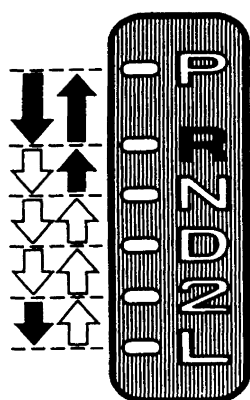

Shift while holding the lock  
release button in.



Shift normally

D03331  
D00774  
D03331

D03934

## INSTALLATION

Installation is in the reverse order of removal  
(See page AT-38).

HINT:

After installation, inspect shift lever operation.

- When shifting it to each position, make sure that the shifting lever moves smoothly, can be moderately operated and the position indicator displays correctly.

**Positions which can be operated without pressing the shift lever knob button**

LHD:

R → N → D, L → 2 → D → N

RHD:

R → N → D → 2, L → 2 → D → N

**Positions which can be operated only with pressing the shift lever knob button**

LHD:

P → R, D → 2 → L, N → R → P

RHD:

2 → L, N → R → P

- When starting the engine, make sure that the vehicle moves forward when shifting from N to D range, and moves rearward when shifting to R range.