


INSPECTION

1. LHD Models : INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	10 - 11	Continuity

If continuity is not as specified, replace the switch.

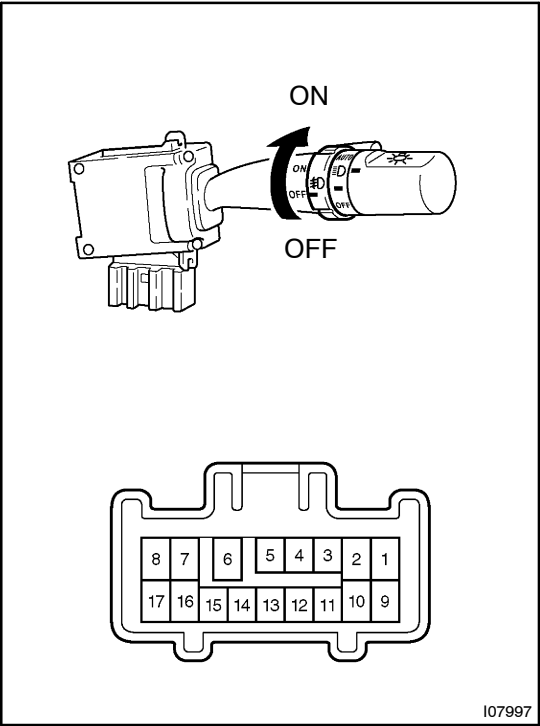


2. RHD Models : INSPECT FRONT FOG LIGHT SWITCH CONTINUITY



Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	12 - 16	Continuity

If continuity is not as specified, replace the switch.

RHD Models

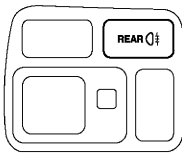

LHD Models

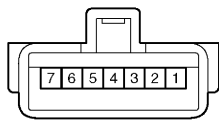
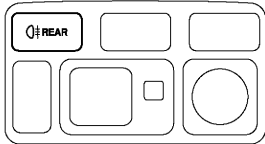


I07998

**3. Europe Models :
INSPECT Rear FOG LIGHT SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	3 – 4	Continuity
Illumination circuit	1 – 2	Continuity

If continuity is not as specified, replace the switch.

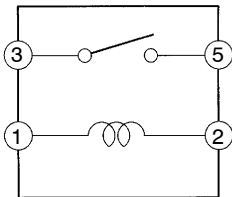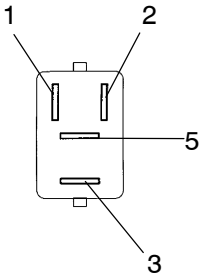



N

I01200

4. INSPECT FRONT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

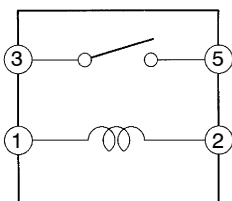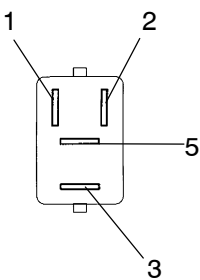

N

I01200

5. INSPECT REAR FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.