



w/o Sliding Roof

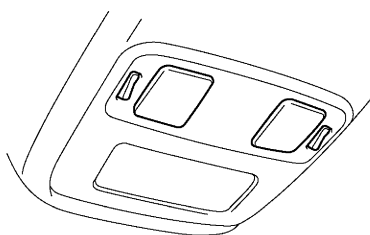

W/ Sliding Roof

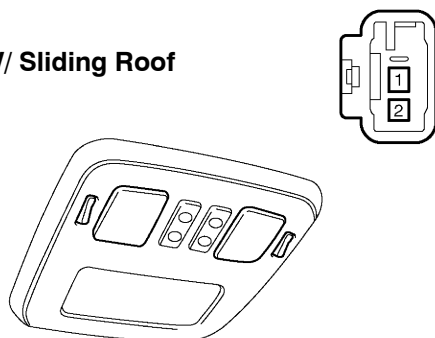

I08069


## INSPECTION

### 1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 2	Continuity

If continuity is not as specified, replace the light assembly or bulb.

w/o Sliding Roof

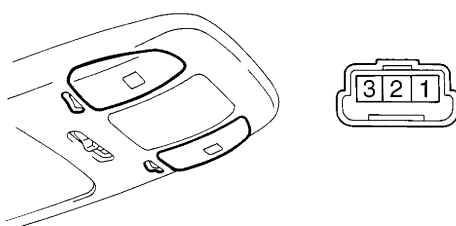

I06429


### 2. INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

w/o SLIDING ROOF :

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.

w/ Sliding Roof

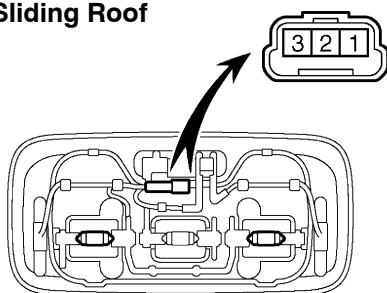

I06421


### 3. INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

w/ SLIDING ROOF :

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	1 - 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.

w/o Sliding Roof

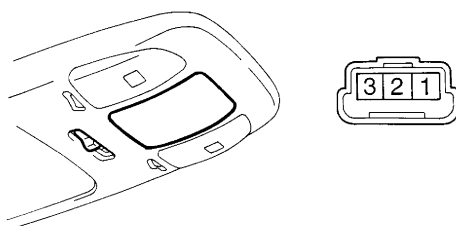


I06430

### 4. INSPECT ROOM LIGHT SWITCH CONTINUITY

w/o SLIDING ROOF :

Switch position	Tester connection	Specified condition
Room Light Switch OFF	-	No continuity
Room Light Switch DOOR	2 - 3	Continuity
Room Light Switch ON	1 - 3	Continuity


If continuity is not as specified, replace the light assembly or bulb.

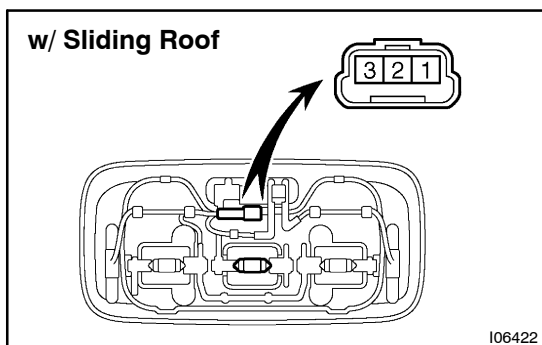

## 5. INSPECT ROOM LIGHT SWITCH CONTINUITY w/ SLIDING ROOF :

Switch position	Tester connection	Specified condition
Room Light Switch OFF	-	No continuity
Room Light Switch DOOR	2 - 3	Continuity
Room Light Switch ON	1 - 3	Continuity

If continuity is not as specified, replace the light assembly or bulb.

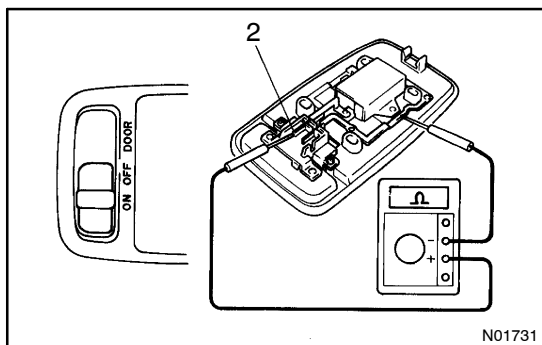


## 6. INSPECT REAR ROOM LIGHT SWITCH CONTINUITY

- Disconnect the connector from room light assembly.
- Turn the room light switch ON, check that continuity exists between terminal 2 and body ground.

## 7. INSPECT FRONT AND REAR ROOM LIGHT SWITCH CONTINUITY Normal Roof :


See step 6 in previous page.

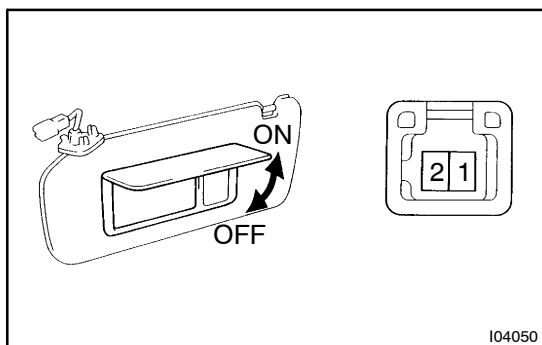

## 8. INSPECT VANITY LIGHT CONTINUITY

Switch position	Tester connection	Specified condition
OFF (closed)	-	No continuity
ON (opened)	1 - 2	Continuity


If continuity is not as specified, replace the vanity light assembly or bulb.

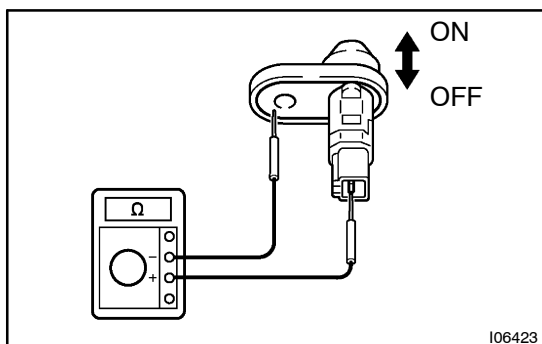

## 9. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Check that continuity exists between terminal and switch body with the switch ON (switch pin released).
- Check that no continuity exists between terminals and switch body with the switch OFF (switch pin pushed).


If continuity is not as specified, replace the switch.

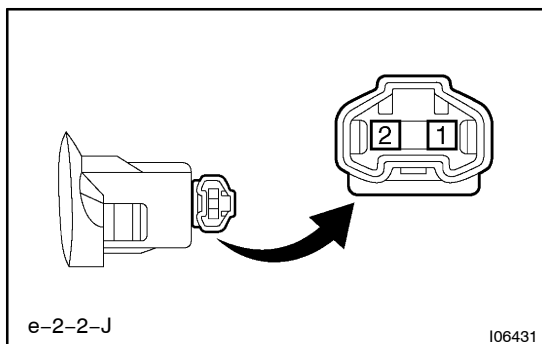

## 10. INSPECT DOOR COURTESY LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

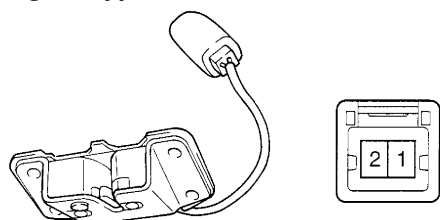**Liftgate Type**


Back Door Lock Assembly  
□ Back Door Courtesy Switch

I06432

**11. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY****Liftgate Type :**

Switch position	Tester connection	Specified condition
OFF (closed)	-	No continuity
ON (opened)	1 - 2	Continuity

If continuity is not as specified, replace the back door lock assembly.

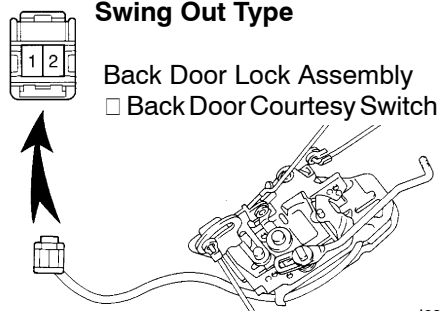**Swing Out Type**


Back Door Lock Assembly  
□ Back Door Courtesy Switch

I08000

**12. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY****Swing Out Type :**

Switch position	Tester connection	Specified condition
OFF (closed)	-	No continuity
ON (opened)	1 - 2	Continuity

If continuity is not as specified, replace the back door lock assembly.

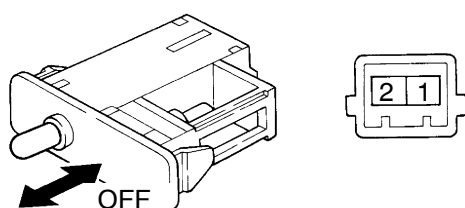**13. INSPECT GLOVE COMPARTMENT DOOR COURTESY SWITCH CONTINUITY**

ON


OFF

I06433

**14. INSPECT LICENCE PLATE LIGHT CONTINUITY****Liftgate Type :**

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

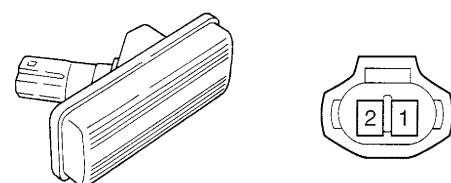


e-2-2-J

I06434

**15. INSPECT LICENCE PLATE LIGHT CONTINUITY****Swing Out Type :**

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

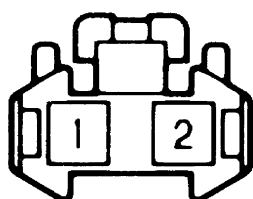

e-2-2-J

I04053