


# POWER MIRROR CONTROL SYSTEM LOCATION


BE02J-06

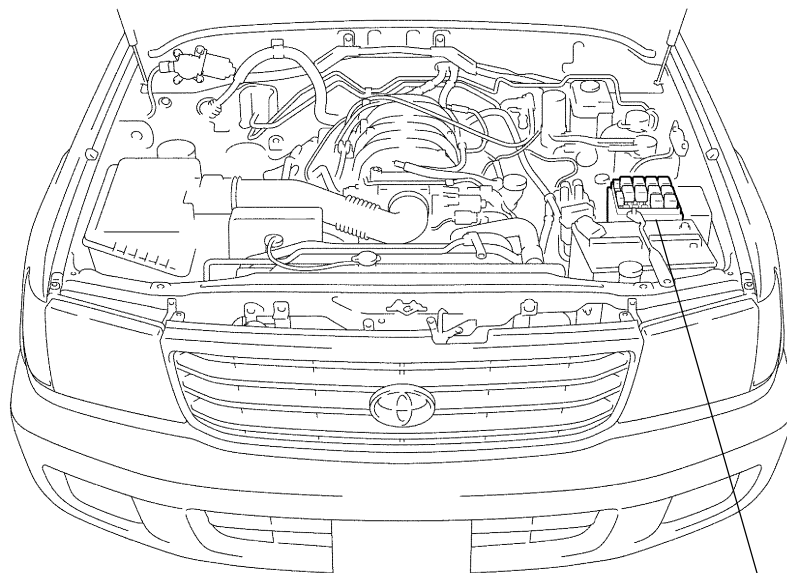

Engine Room Junction Block

- MIRR Fuse
- CIGAR Fuse
- ECU-B Fuse

Outer Mirror Assembly  
● Mirror Motor

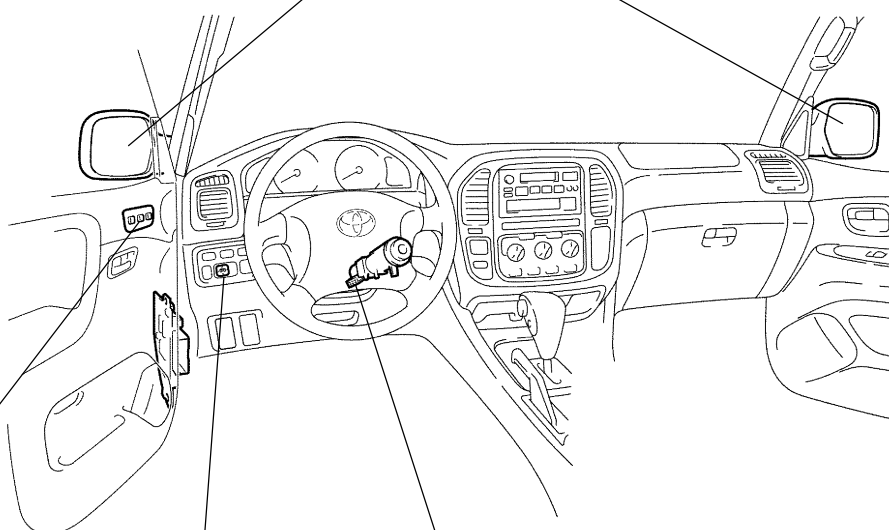

Driving position memory  
and return switch

Mirror Switch

Ignition Switch