


# HORN SYSTEM LOCATION


BE0FY-05

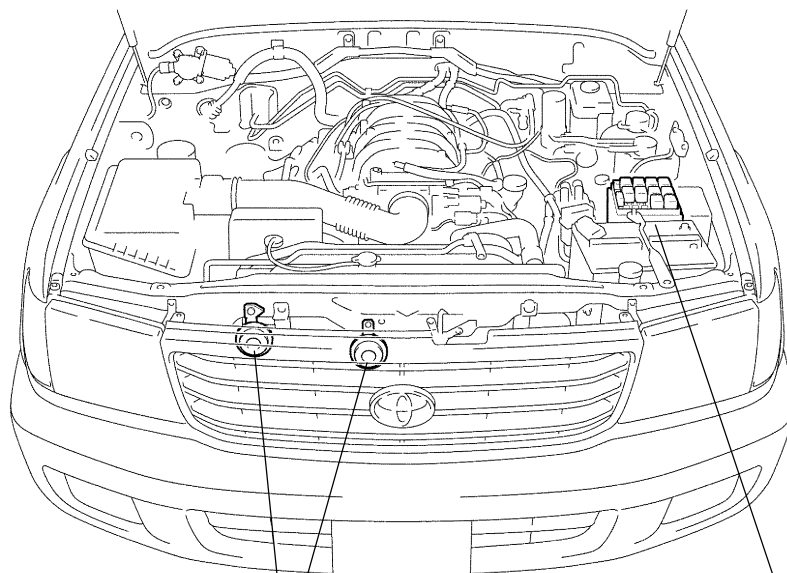

Horn

Engine Room Junction Block

- HORN Fuse
- Horn Relay

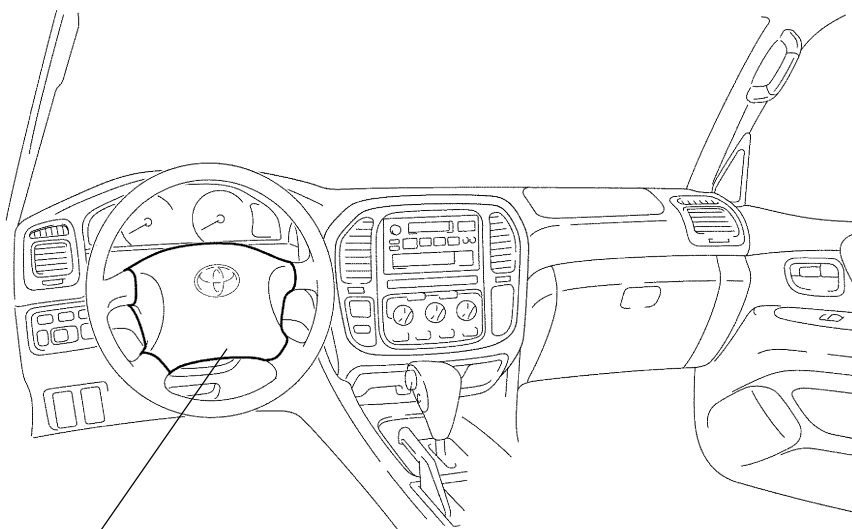

Horn Switch