REASSEMBLY

BO1U0-01

Reassembly is in the reverse order of disassembly (See page BO-26).