REASSEMBLY

BO1U4-01

Reassembly is in the reverse order of disassembly (See page BO-32).