

H04850

INSTALLATION

1. INSTALL REAR WIPER MOTOR AND LINK ASSEMBLY

- (a) Install the wiper motor and link assembly with 5 bolts.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)


- (b) Connect the connector.

2. INSTALL THESE PARTS:

- (a) Back door garnish
- (b) Center back door garnish
- (c) Inside handle bezel
- (d) Assist grip

3. INSTALL REAR WIPER ARM

- (a) Install the grommet.
- (b) Operate the wiper once and turn the wiper switch OFF.
- (c) Install the wiper arm and tighten nut by hand.

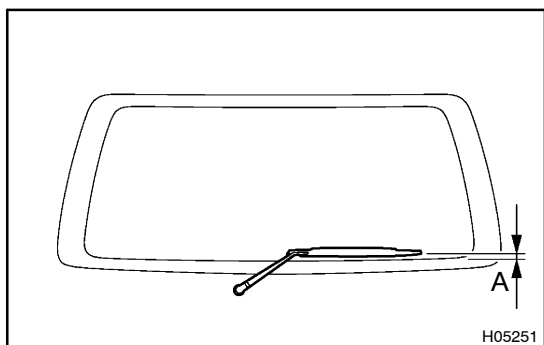

H05251

- (d) Adjust the installation position of the wiper arms to the position shown in the illustration.

A: Approx. 38 ± 10 mm (1.50 ± 0.39 in.)

- (e) Torque the nuts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (f) Close the cover.