



## REMOVAL

### 1. w/ Spare Wheel Carrier: REMOVE SPARE WHEEL

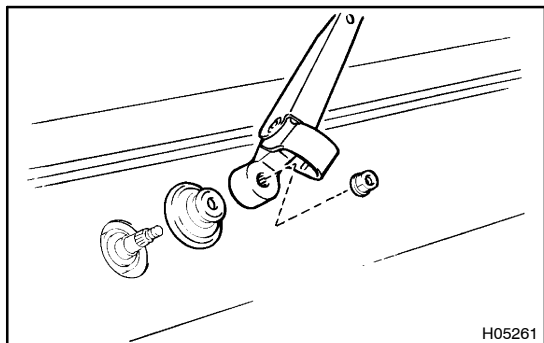


### 2. REMOVE REAR WIPER ARM

- (a) Open the cover.
- (b) Remove the nut, wiper arm and grommet.

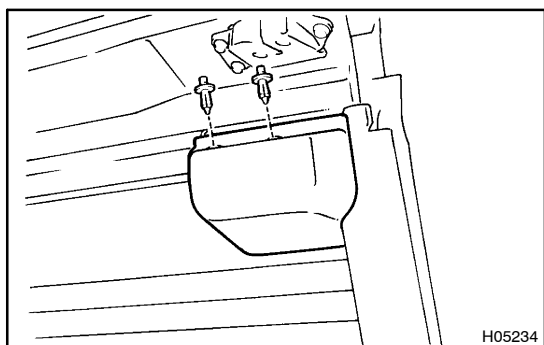


### 3. w/ High -Mount Stop Light: REMOVE HIGH -MOUNT STOP LIGHT

- (a) Remove the 2 clips and high -mount stop light cover.

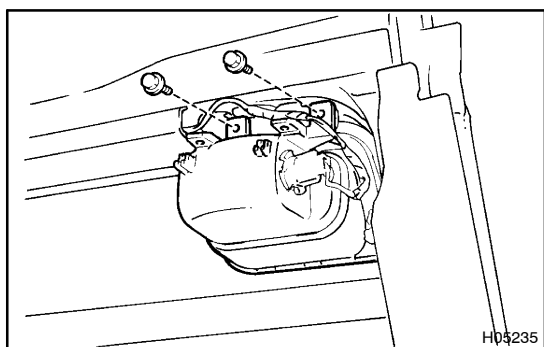

- (b) Disconnect the connector, then remove the 2 bolts and high-mount stop light.

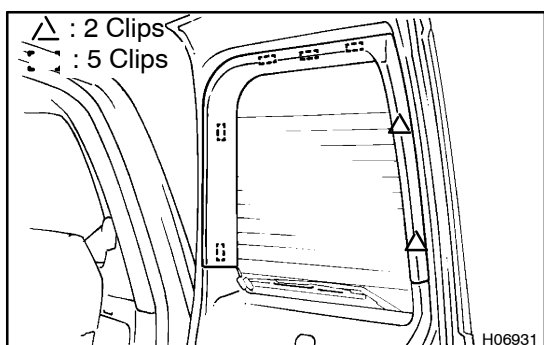


### 4. REMOVE BACK DOOR GARNISH

- (a) w/o High -Mount Stop Light:

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

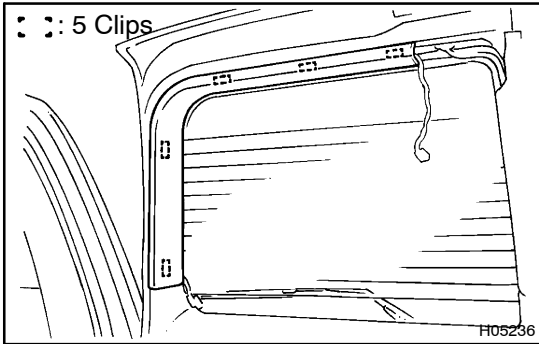


(b) w/ High -Mount Stop Light:

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

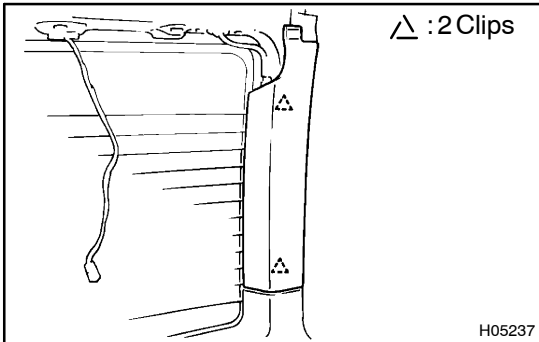


(c) w/ High -Mount Stop Light:

Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

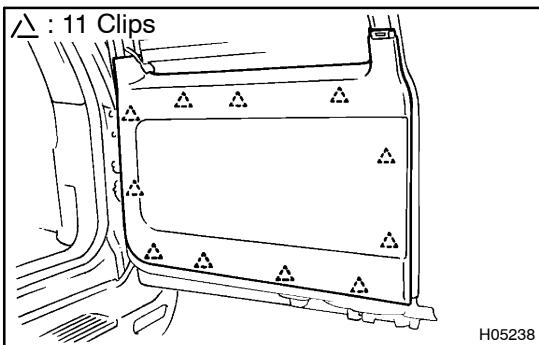

## 5. REMOVE BACK DOOR TRIM

(a) Insert a screwdriver between the door and door trim to pry out.

HINT:

Tape the screwdriver tip before use.

(b) Remove the back door trim.

## 6. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

HINT:

Tape the screwdriver tip before use.

## 7. REMOVE REAR WIPER MOTOR

(a) Disconnect the connector.

(b) Unfasten the 3 bolts and remove the rear wiper motor.

