

## SLIDING ROOF ON-VEHICLE INSPECTION

### 1. INSPECT SLIDING ROOF GLASS

- (a) Start the engine and check the operation time of the sliding roof.

**Operation time:**

**Approx. 6 secs.**

- (b) Check for abnormal noise or binding during operation.  
(c) With the sliding roof fully closed, check for water leakage.

### 2. INSPECT DIFFERENCE IN LEVEL

Inspect the difference in level between the roof panel and sliding roof glass (weatherstrip part) when the sliding roof glass is fully closed.


**Except rear end:**

**0 + 1.5 mm (0 + 0.059 in.)**


**0 - 1.0 mm (0 - 0.039 in.)**

**Rear end:**

**0 ± 1.5 mm (0 ± 0.059 in.)**

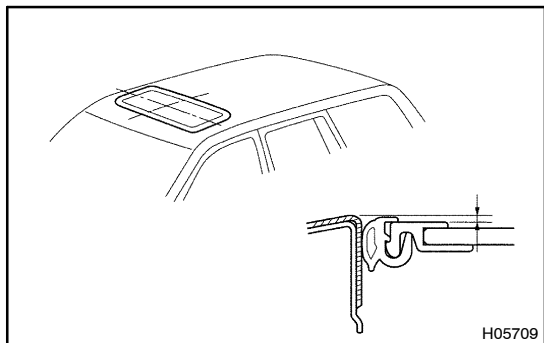

H05709

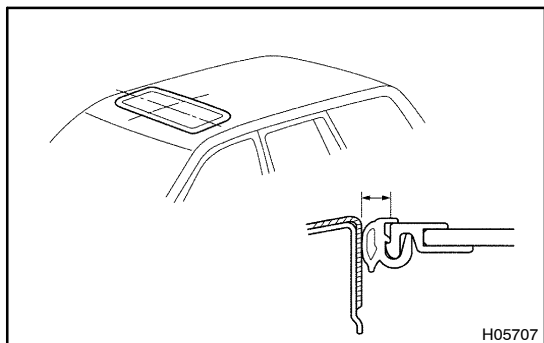

H05707

### 3. INSPECT SLIDING ROOF GLASS CLEARANCE

Inspect the clearance between the roof panel and sliding roof glass when the sliding roof is fully closed.

**Clearance: Uniform all around**